


# euroseats

## Item No.: POD.002.BL Installation guide

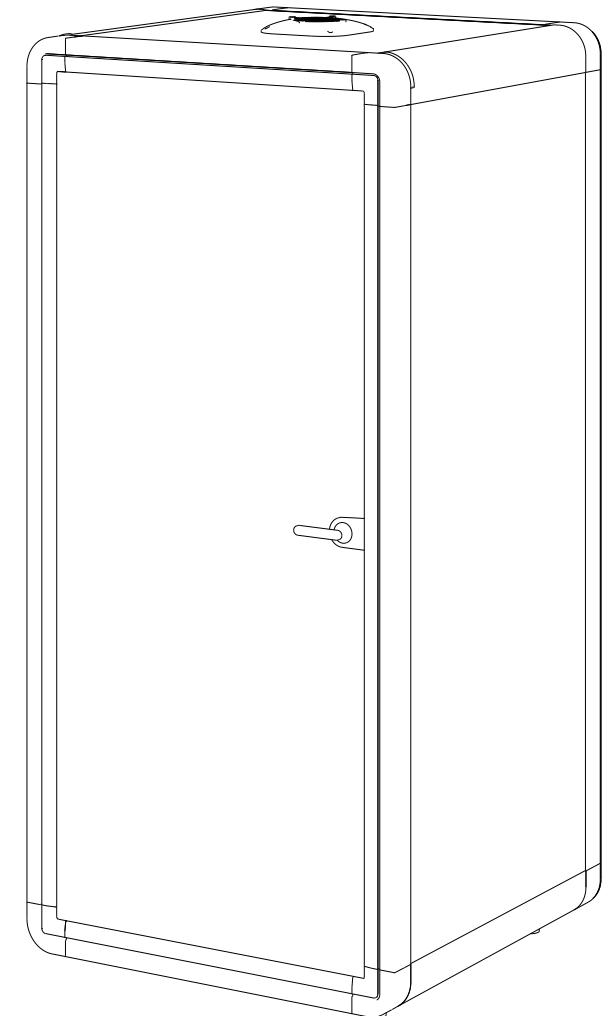

< For reference only, actual product may vary. Company has final interpretation rights.>  
Before installing and using the furniture, please read the user manual carefully and keep it for future reference!


### Technical Specifications

Product Dimensions	Exterior:2300x1050x1052mm Interior:2100x896x1021mm		
Max. Load Capacity of Product	150KG	Max. Load Capacity of Tabletop	20KG
Charging device		USB-C / USB-A 65W Fast charge	
Ventilation System		Adjustable speed twin turbofans	
Soundproofing Effect		ISO23351 30.4dB	


### Product List

#### Accessory Pack List


Note: The line drawings below are for reference only and may differ from the actual product in some cases. Please refer to the actual product for accuracy. If you find any missing tools or encounter installation issues, please contact customer service.

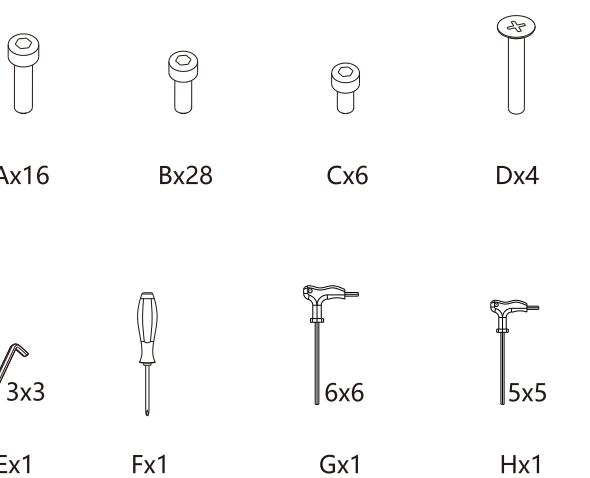


### Preparation before installation

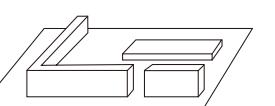

Installation on carpet to prevent scratching

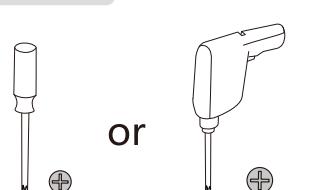

Suggested to have a cross-head screwdriver or power drill ready

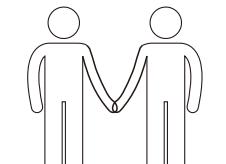

Suggested to have two or more people to collaborate on the installation




It is recommended to bring your own utility knife or scissors

### Parts List

No.	Label illustration	Part
①		
②		
③		
④		
⑤		
⑥		
⑦		

No.	Part	No.	Part
⑧		⑨	
⑩		⑪	
⑫		⑬	
⑭		⑮	
⑯		⑰	
⑱		⑲	
⑳		㉑	
㉒			


### Installation diagram

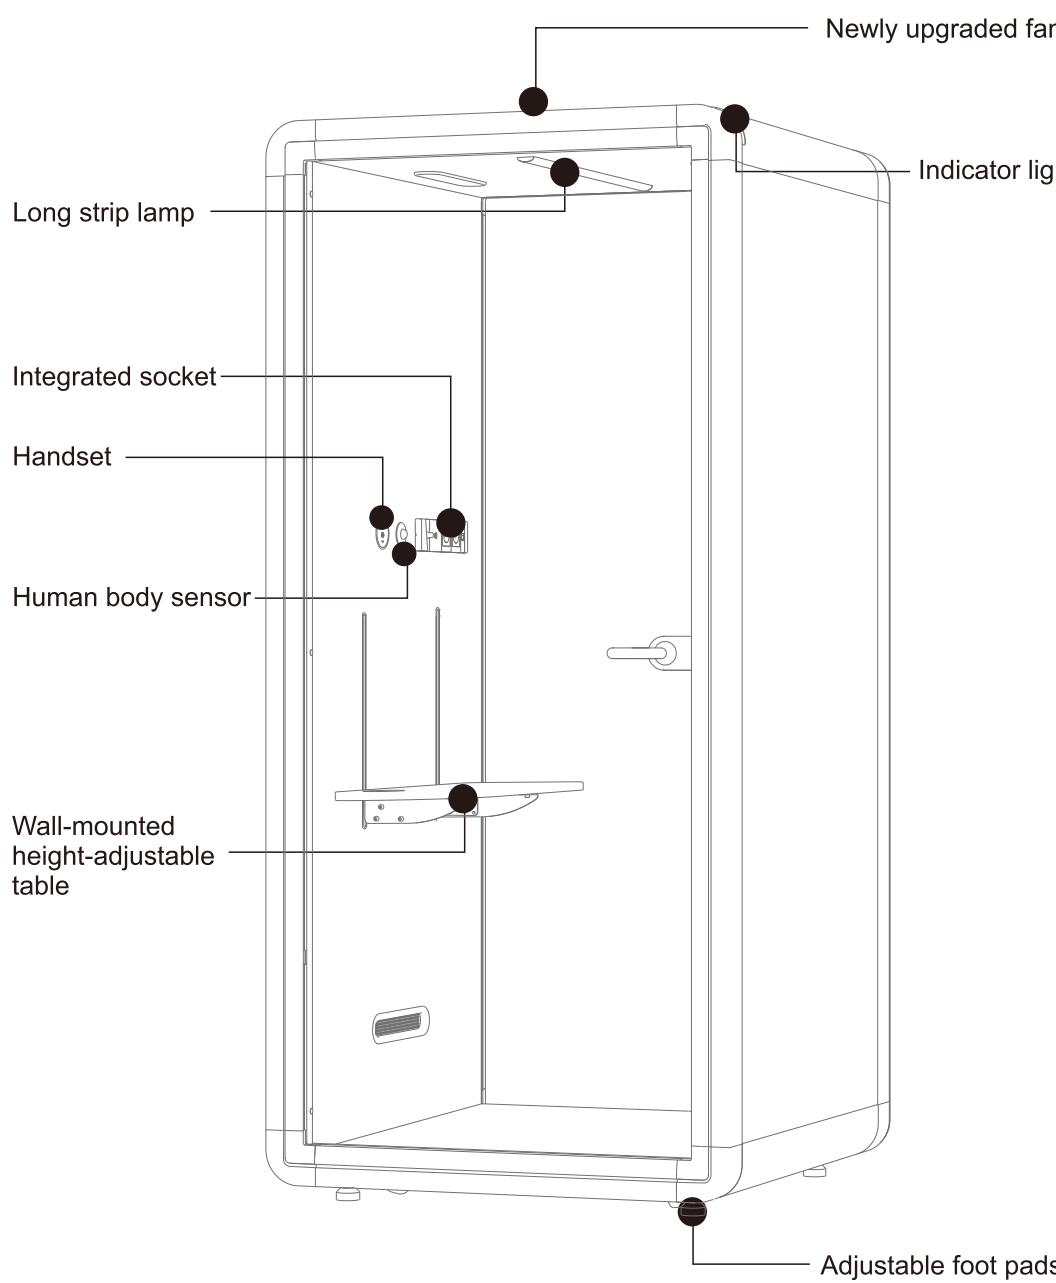


### Installation Steps

#### STEP1 Open the box


##### 1 Cut the plastic bandage

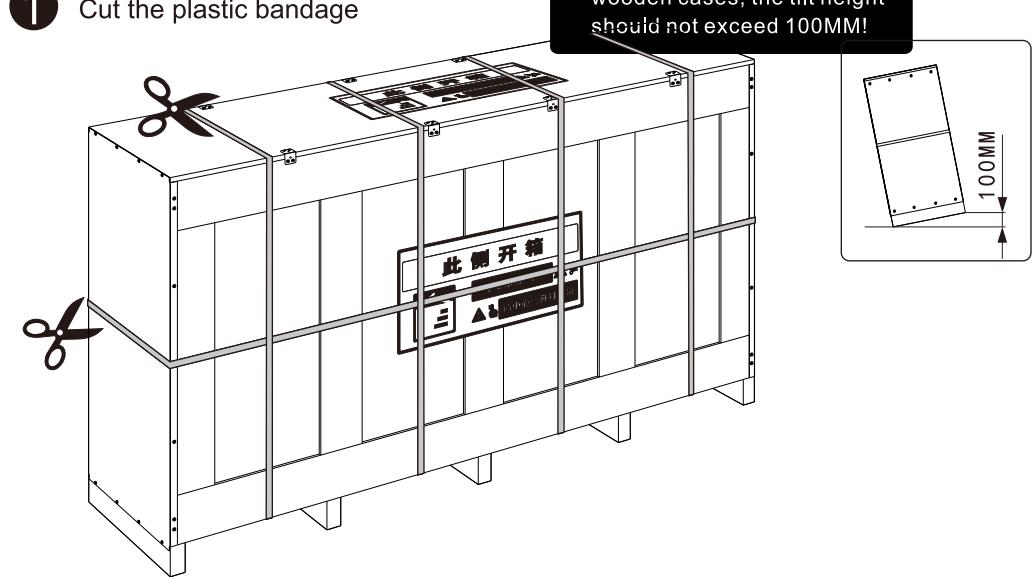


##### 2 Remove the self-tapping nails from the iron sheet on the side of the board marked "This side Unbox" Remove the self-tapping nails from the iron sheet of the top plate

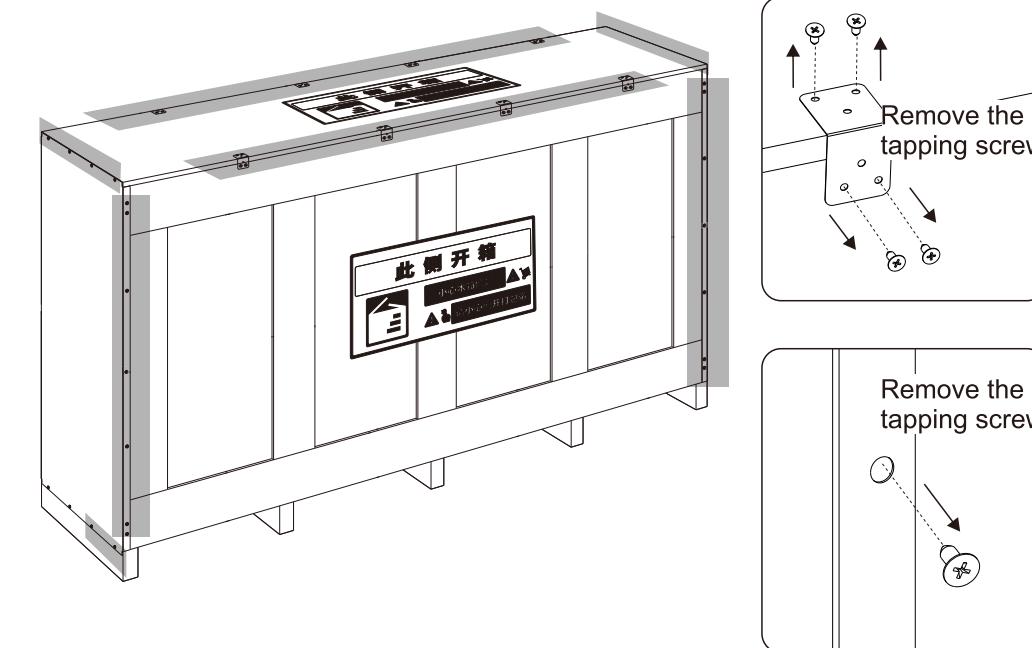


##### 3 Remove the top board first, then the front board

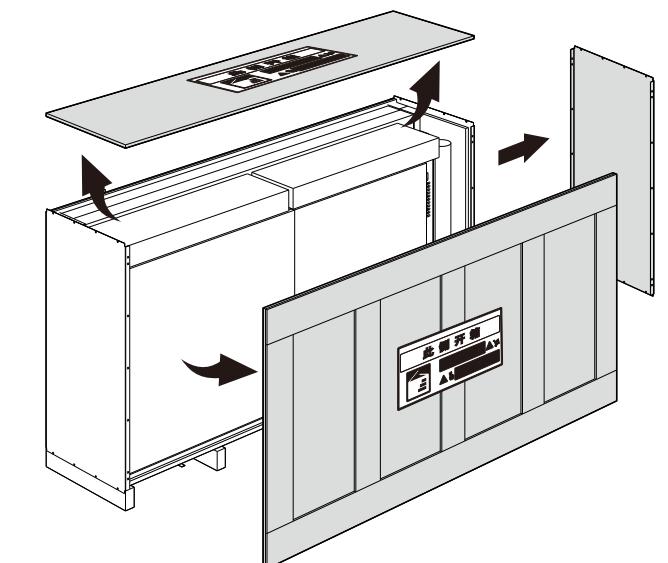

##### 4 Take out the parts according to the sequence 1 to 12 below, and carefully place them on the ground

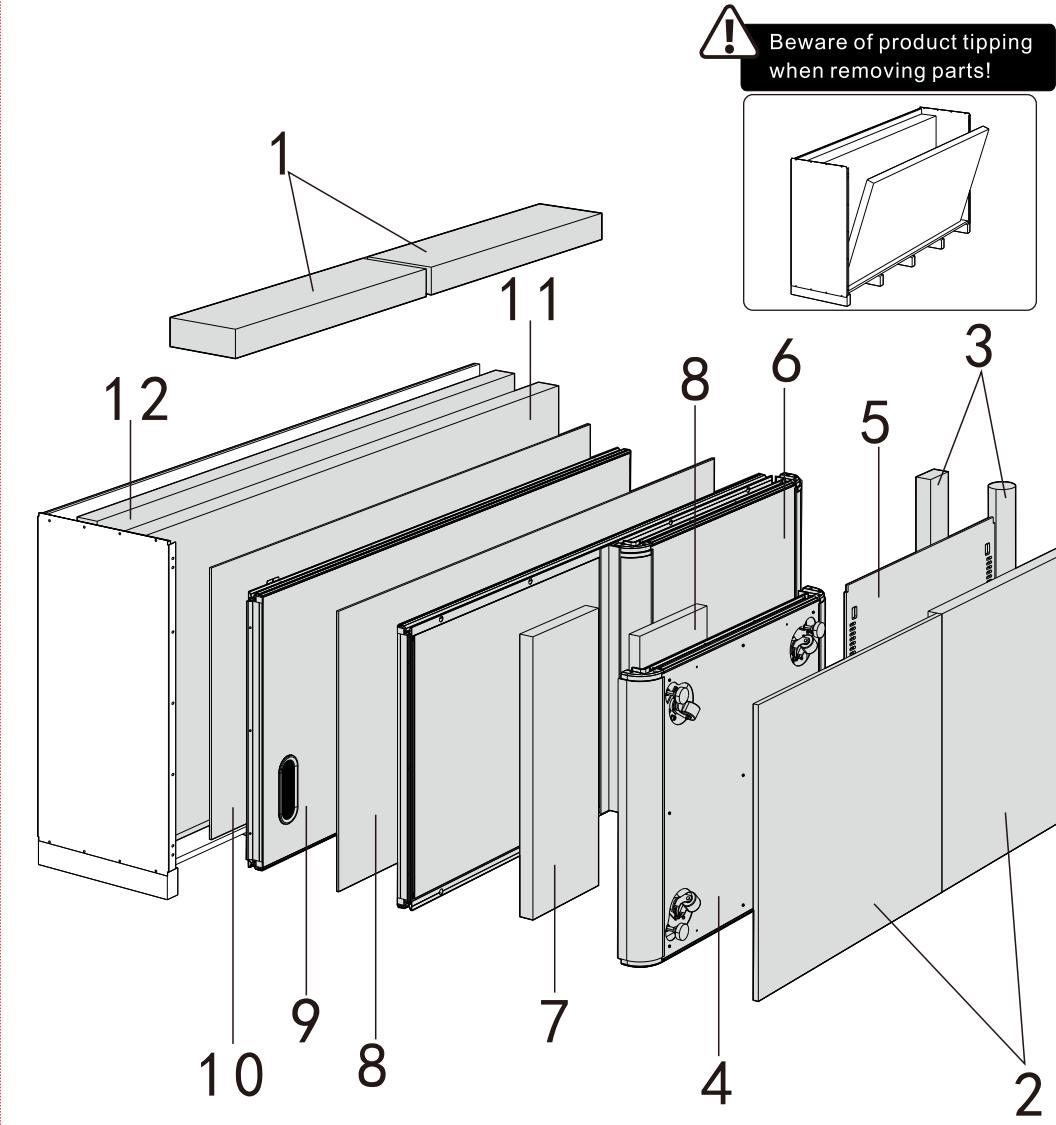


#### STEP2 Remove base

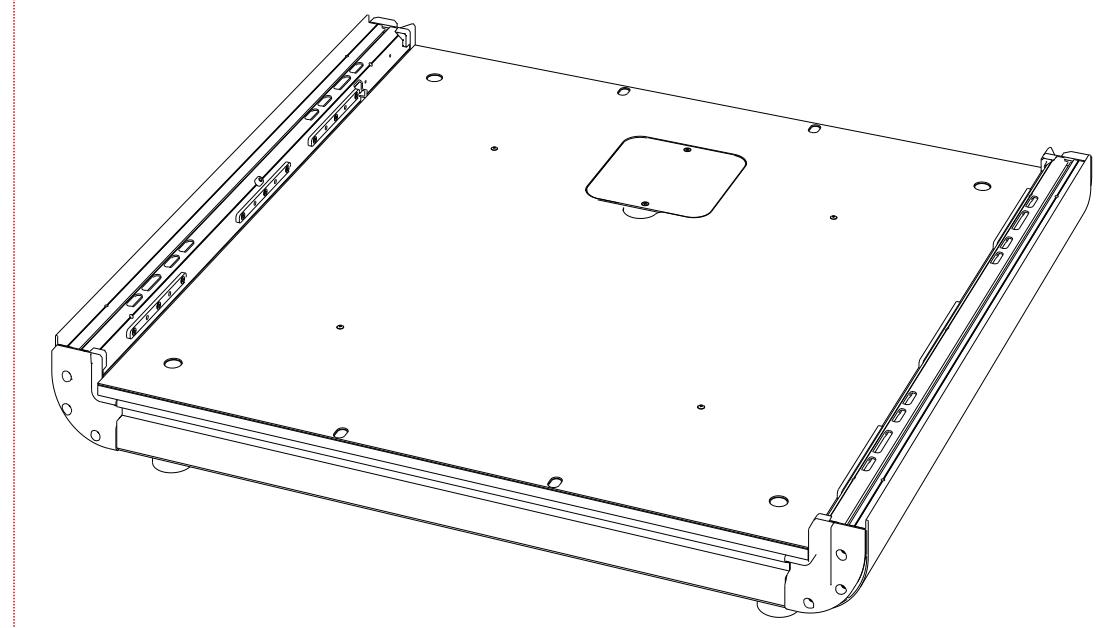


**STEP3**


Leveling foot

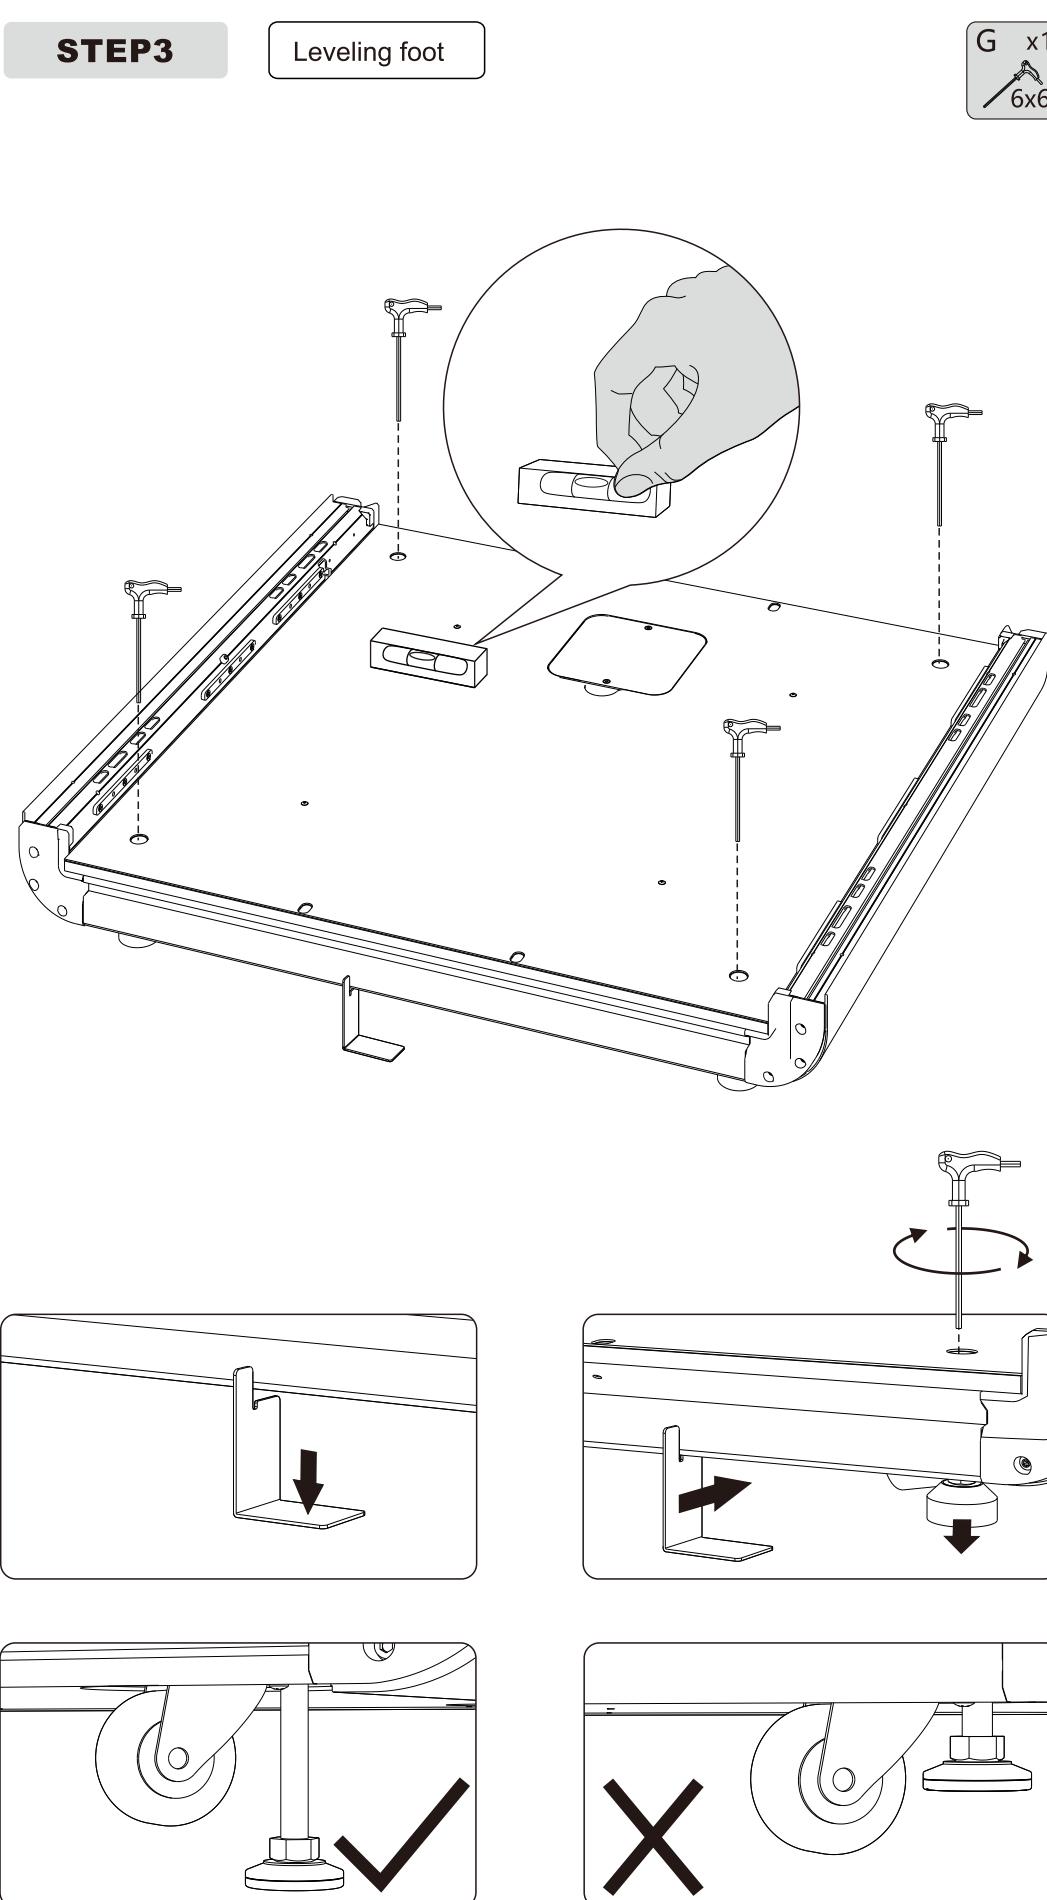**STEP4**


Install non-functional wall

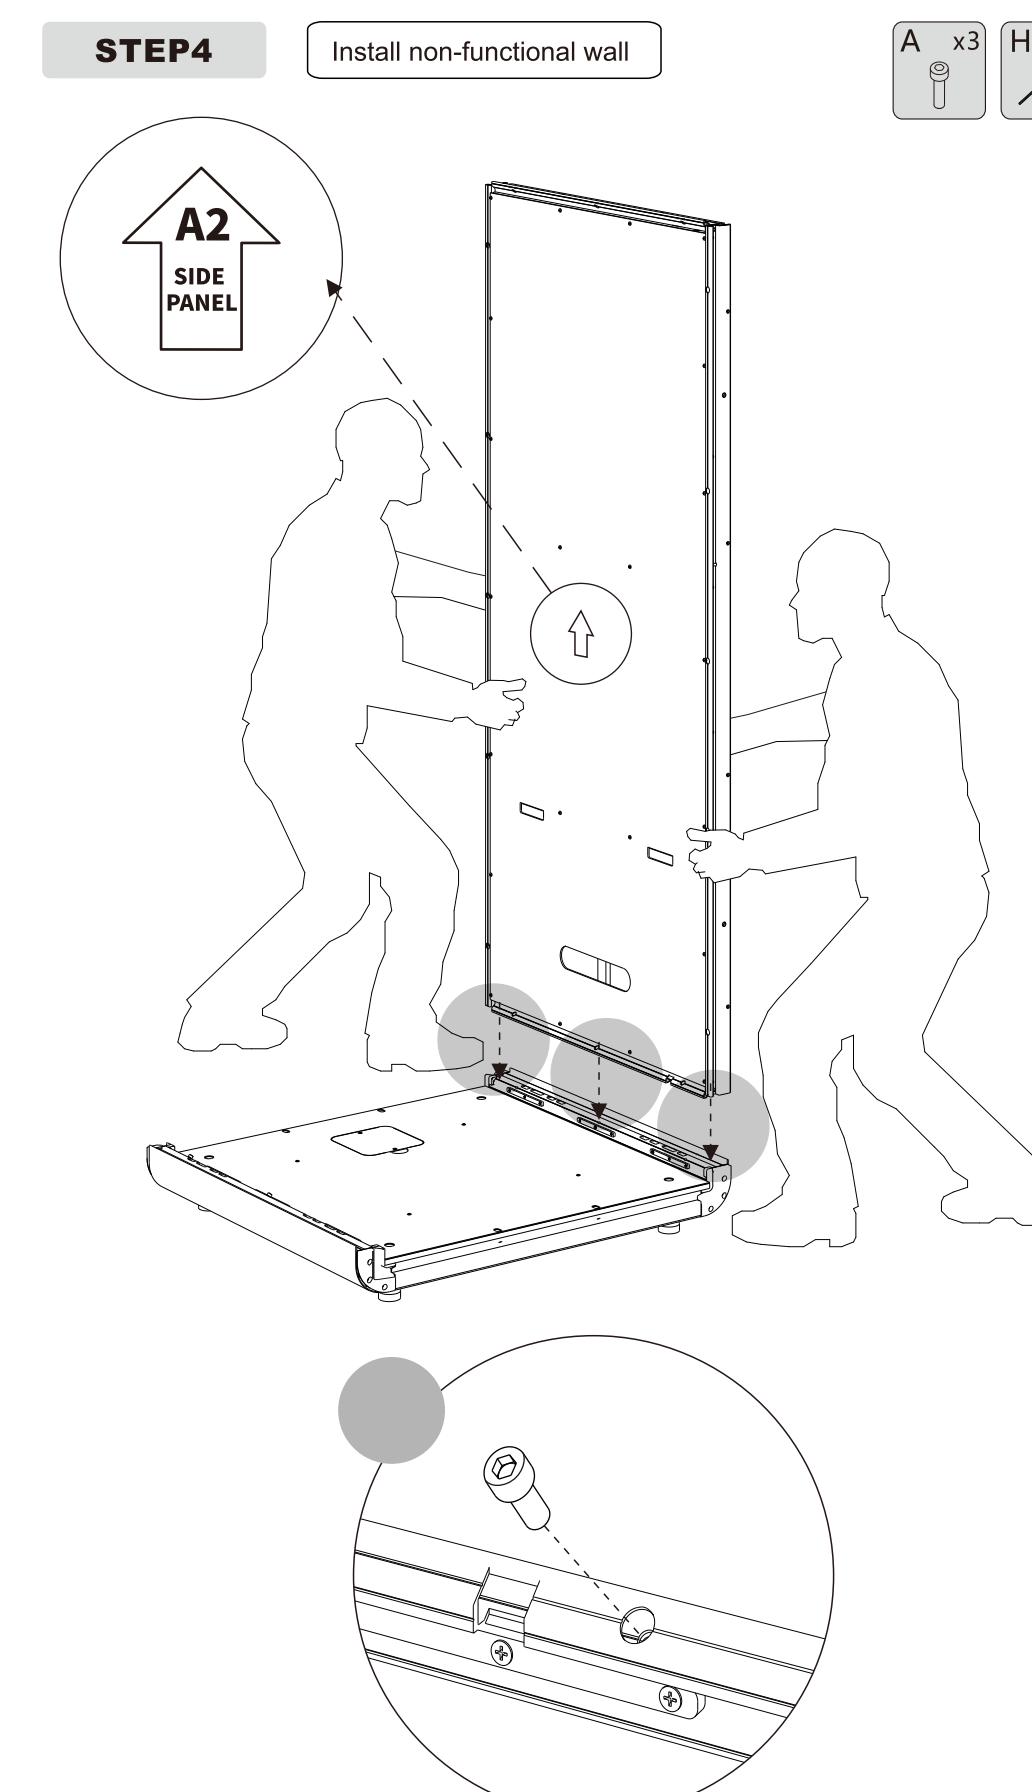
**STEP5**


Install the top of the function wall

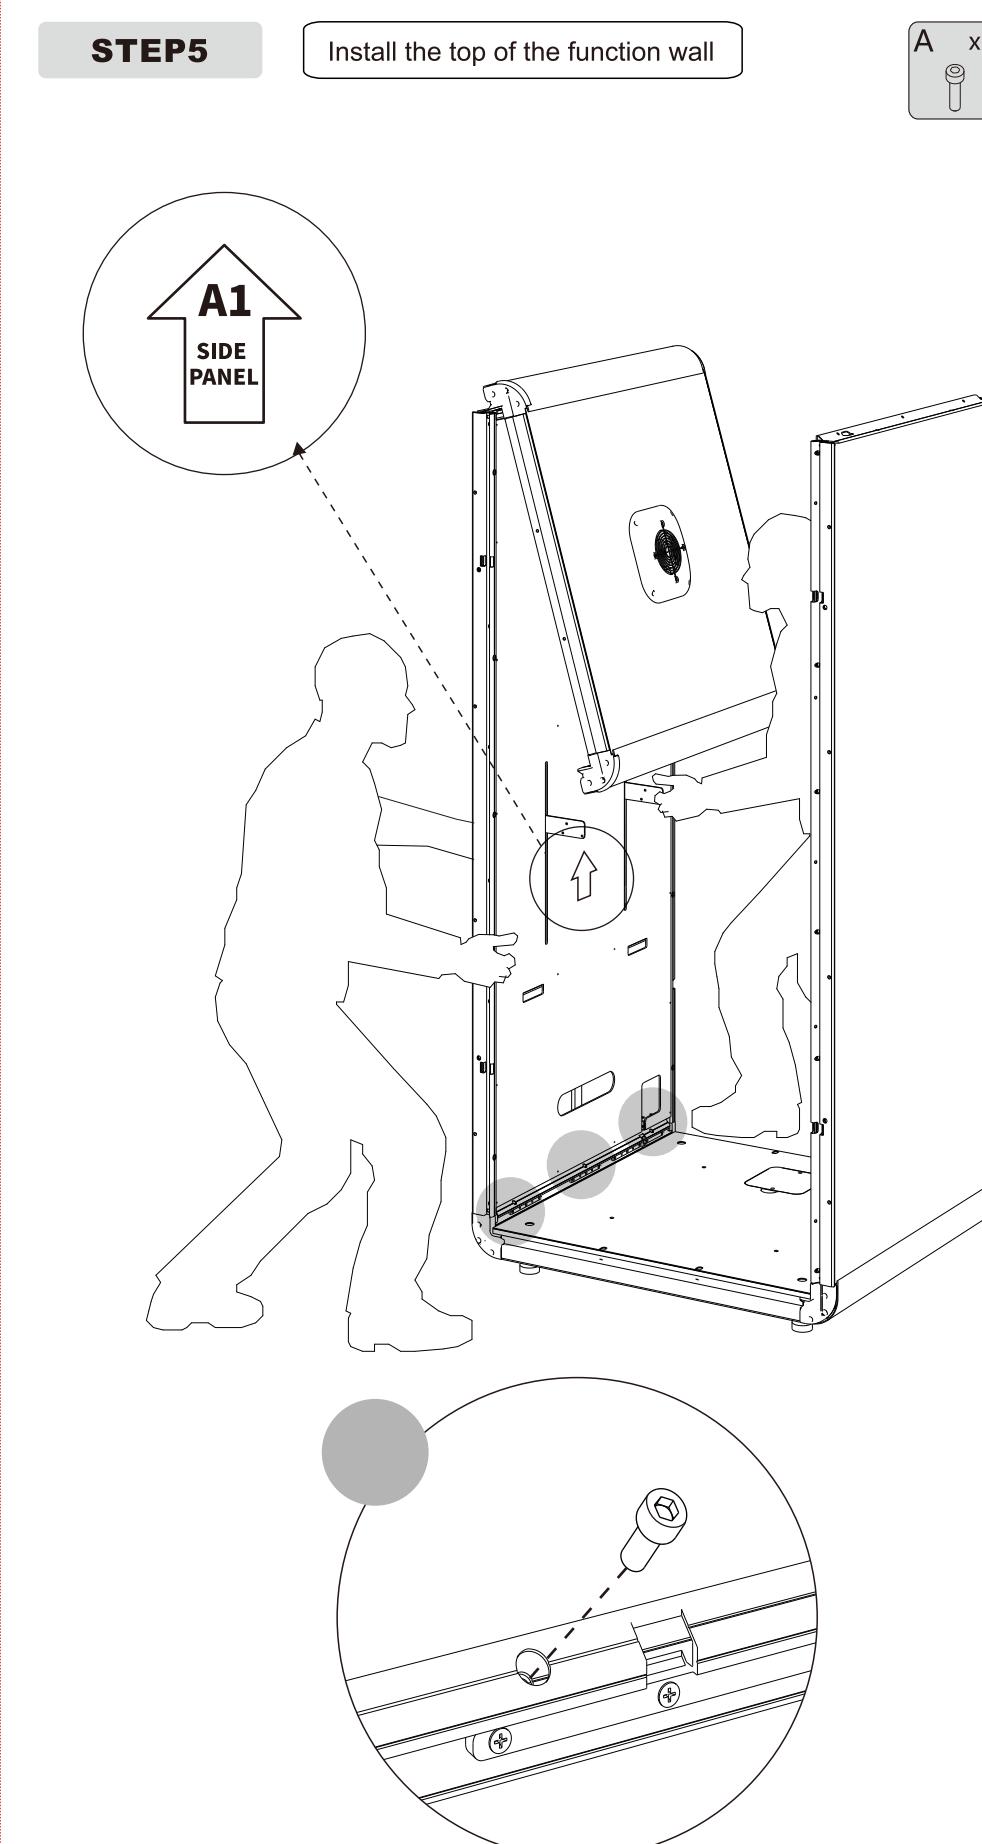**STEP6**

Install the top of the function wall




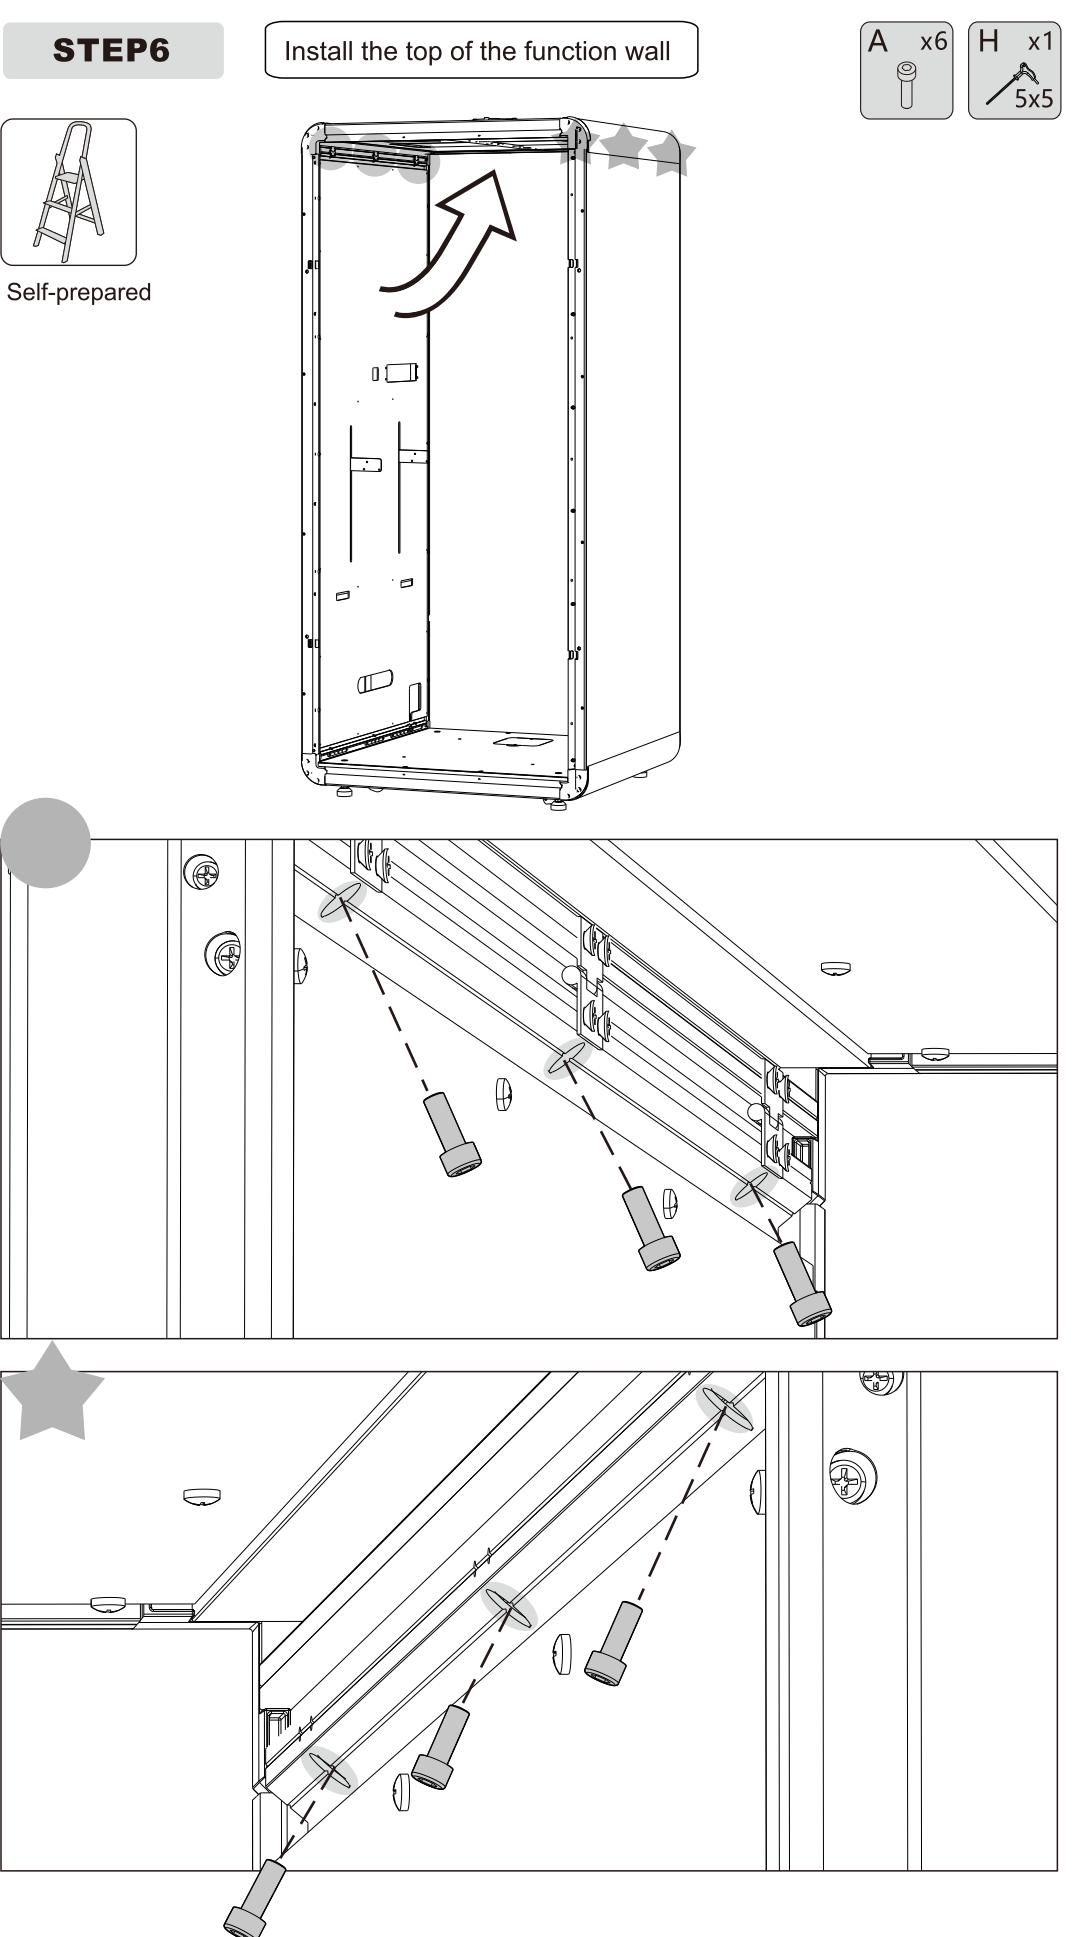


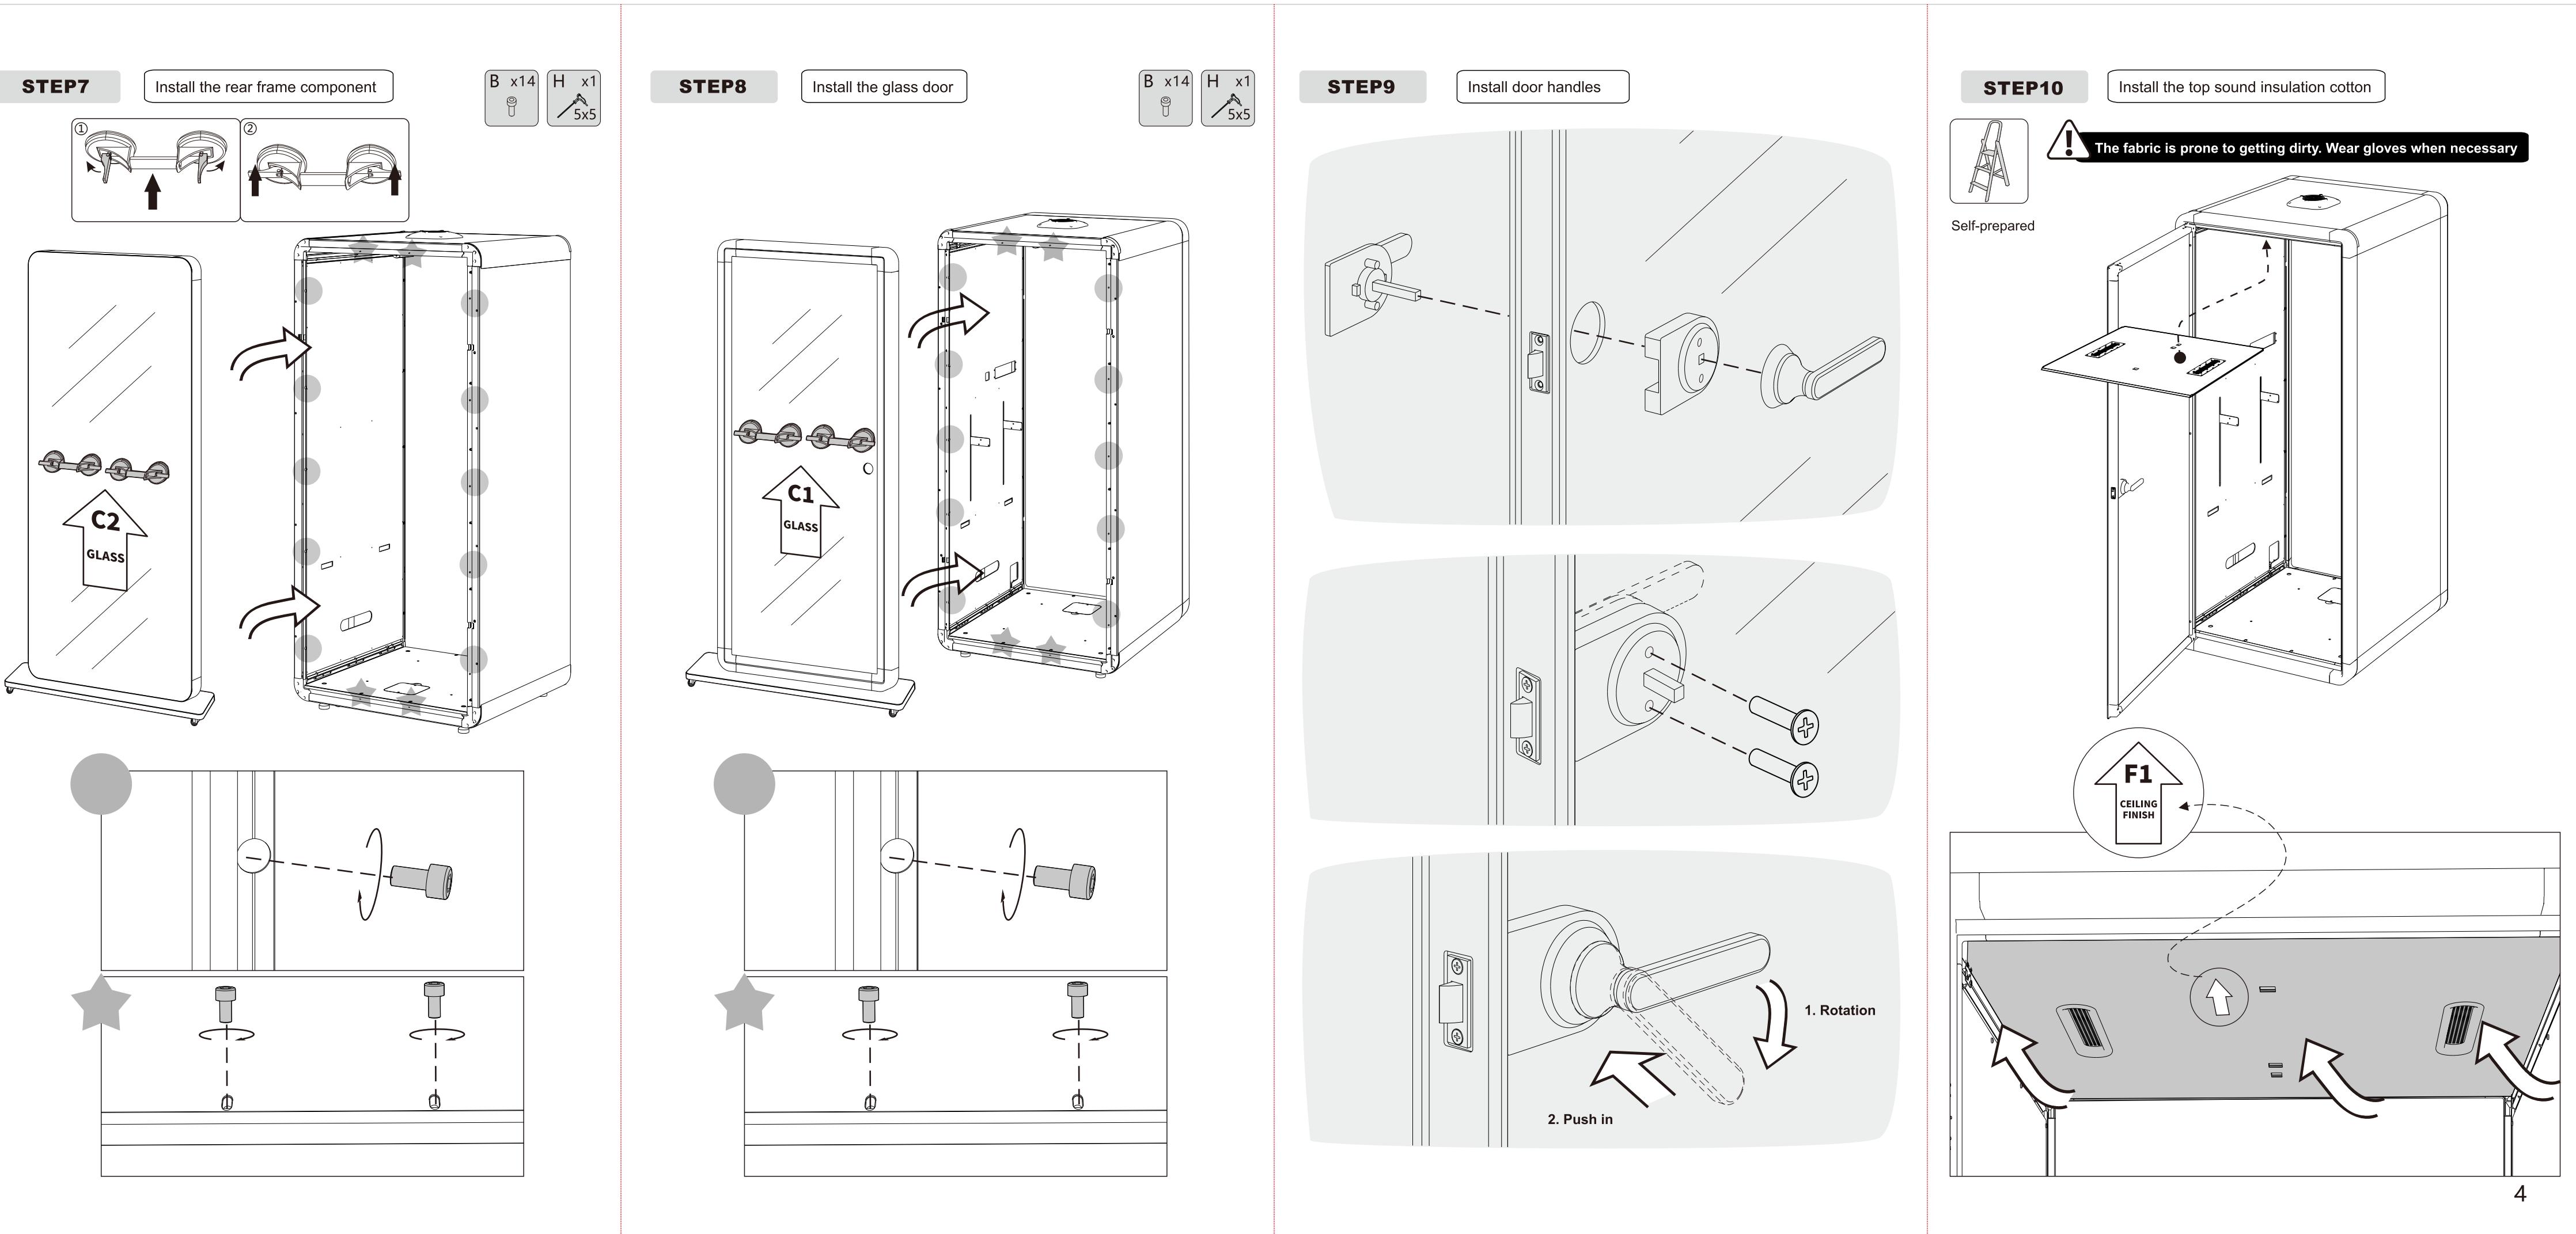

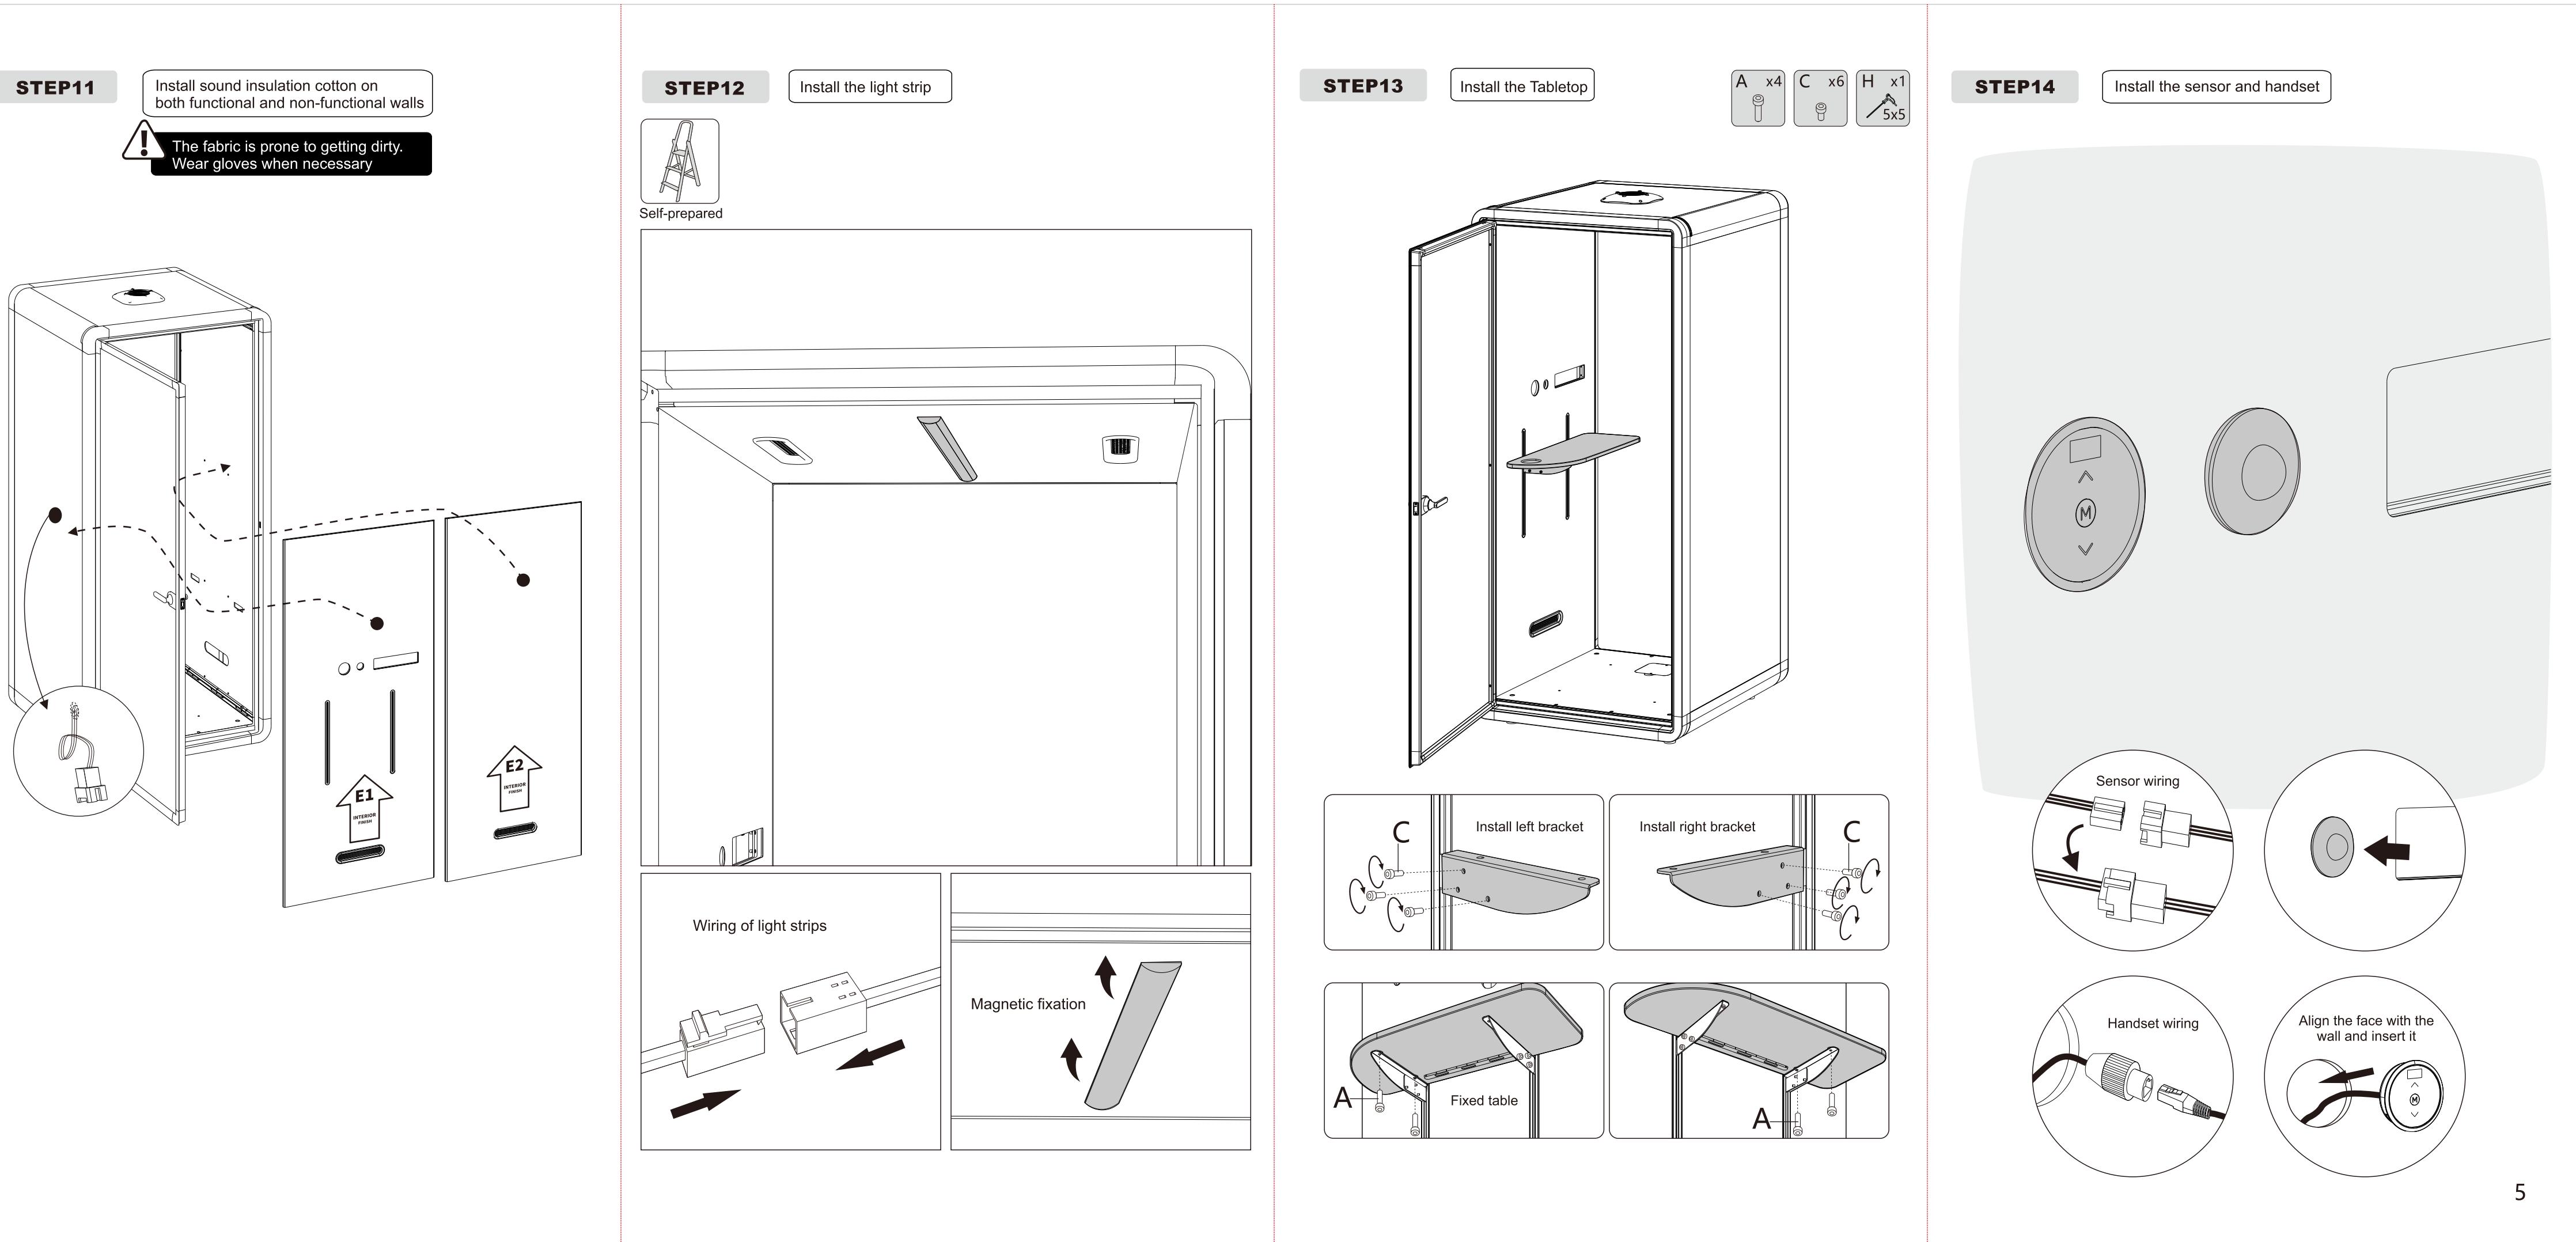


**STEP15** Install a one-piece socket

D x4 F x1

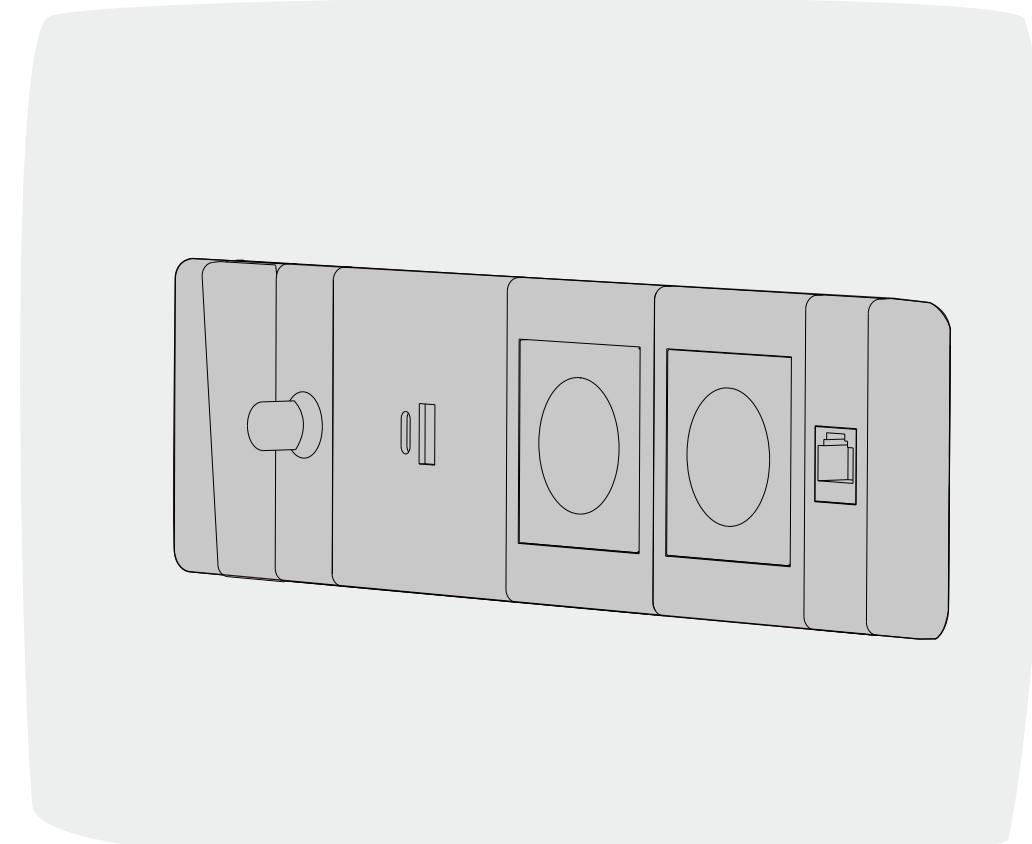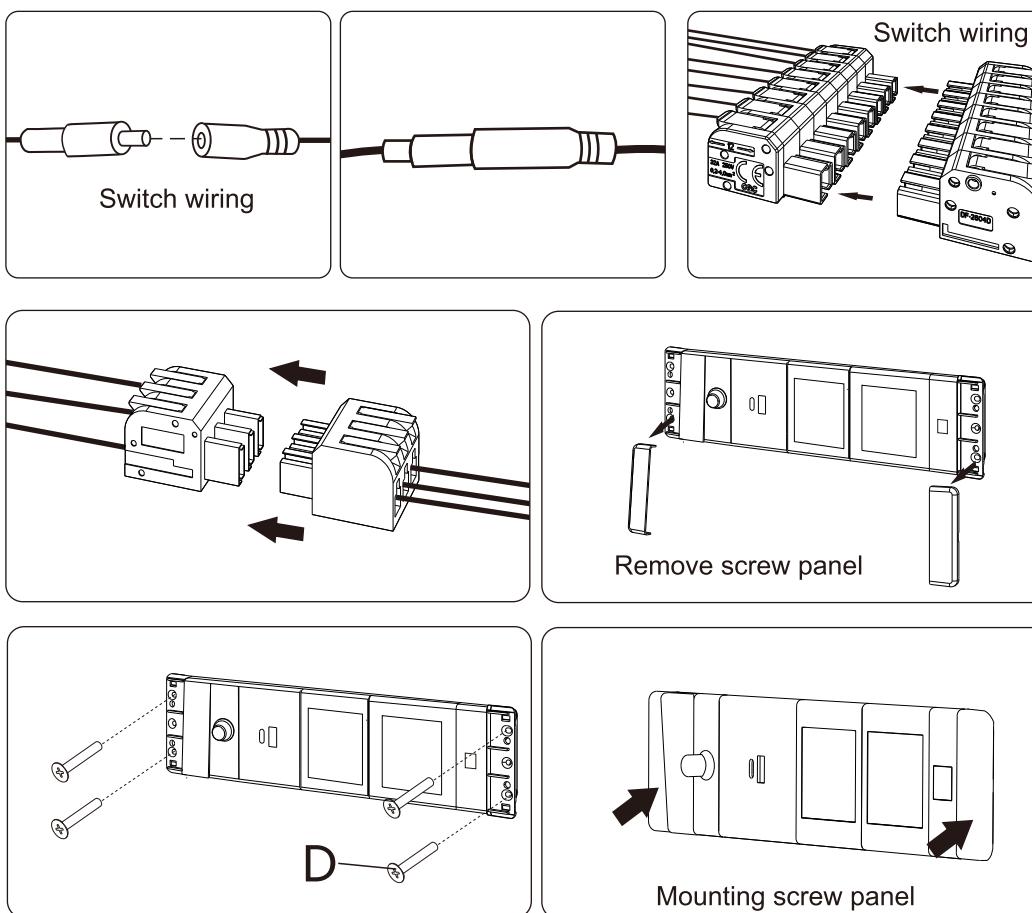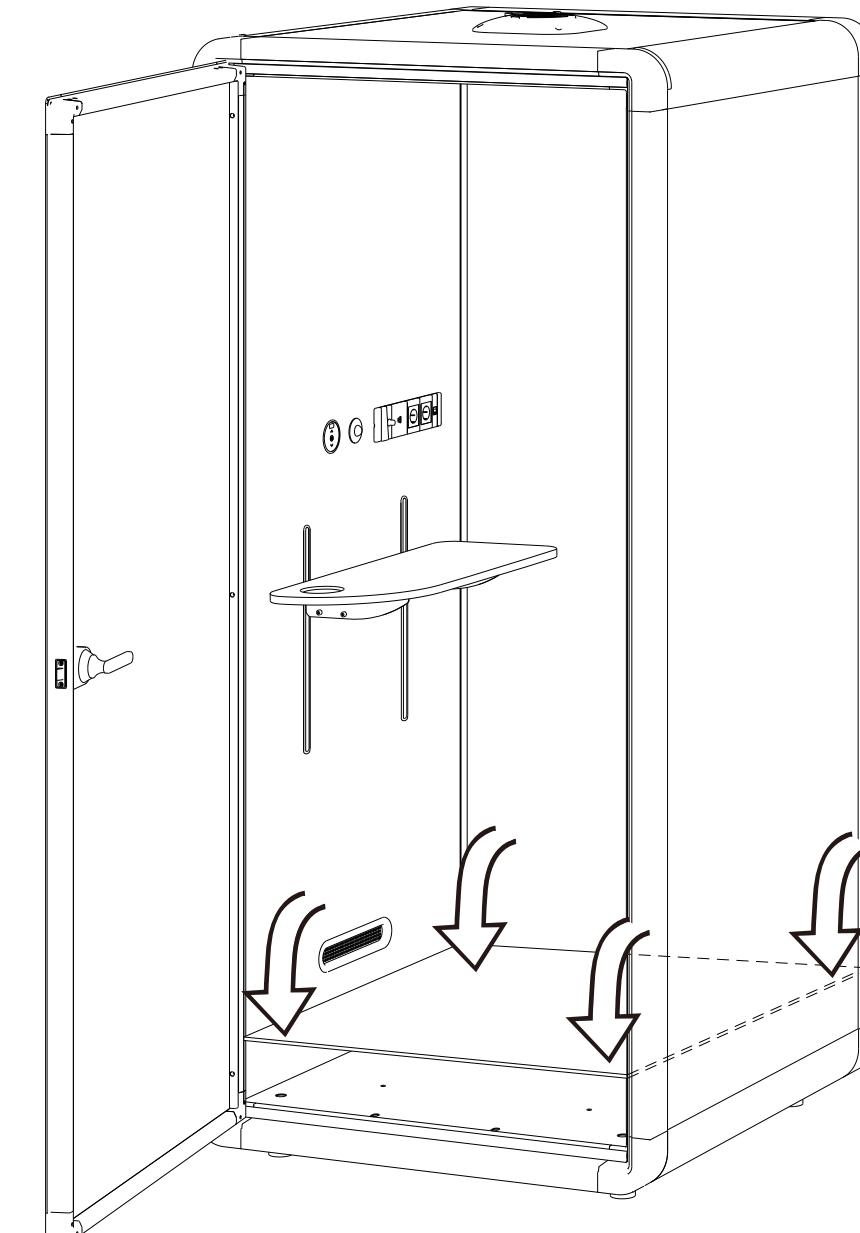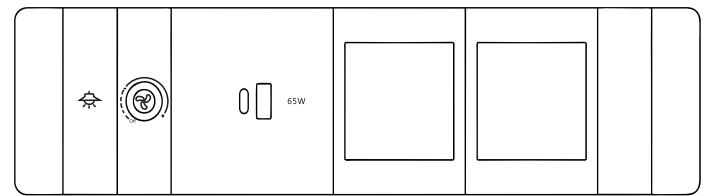**STEP16** Connect to the power supply**STEP17** Install the carpet**Use of the Switch**

The maximum power of the socket is 1000W  
The USB-A+USB-C total 65W fast charge

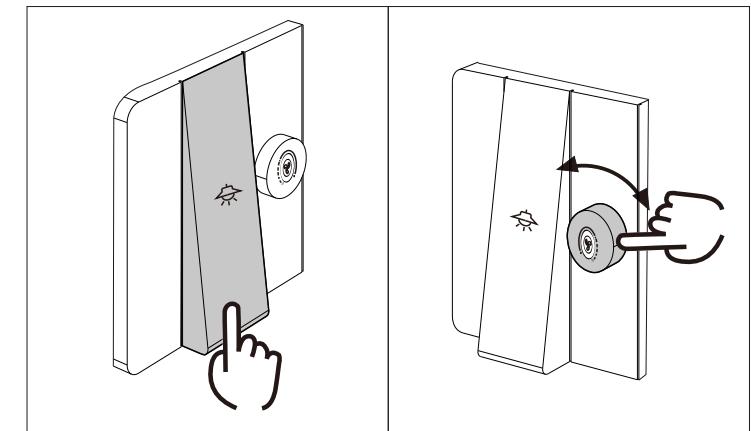


Click up and down to turn the light fixture on/off


Rotate left and right to adjust the ventilation speed

**The use of door hinges**E x1 H x1  
3x3 5x5

**When the door is sinking:**  
 1. Use a 5mm hex key to loosen the two locking screws of the same hinge  
 2. Then, use a 3mm hex key to turn the adjusting screw to tighten the door leaf left and right, and the maximum size of the door gap can be increased by 2mm  
 (Note: The adjusting screws on both sides of the same hinge should be adjusted as much as possible to be the same. There should be no difference in height between the two sides, otherwise it will affect the function and service life of the hinge.  
 3. After adjusting the door gap, tighten the locking screws (to prevent abnormal noises during use).

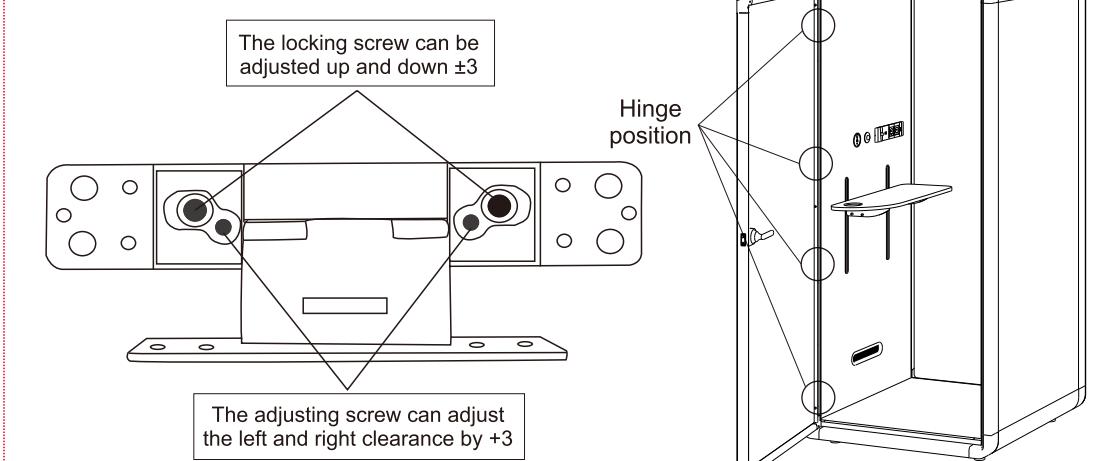


## Instructions for using and setting up the handset

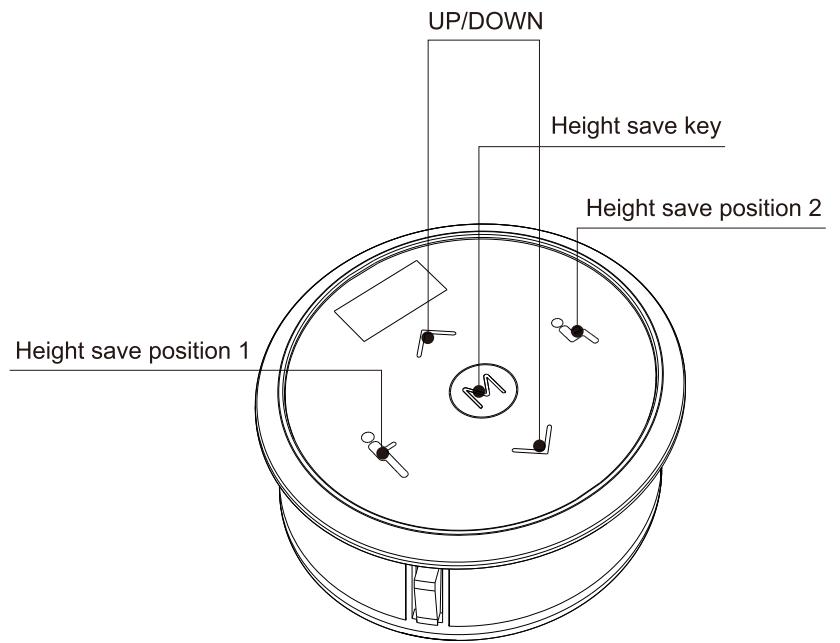

### Suggestion


Set the most comfortable height when sitting as "𠂇" and the most comfortable height when standing as "𠂇". Additional preset heights can be freely set to other heights.

### Button Control for Height Adjustment

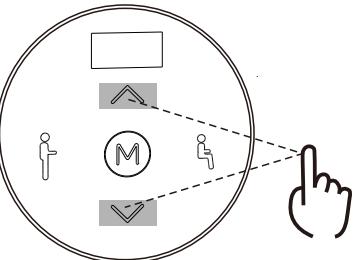

a. By pressing the "▼" or "▲" button, you can adjust the height of the lifting table up or down, and the current height will be displayed on the screen.


### Height Memory Function

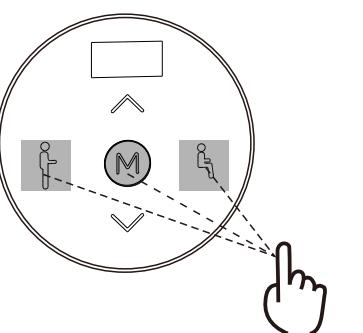

a. Press the up or down key to adjust the table to the required height, press M to save, and the display displays "S-"; Press "𠂇" or "𠂇" again to save the height to the corresponding position 1 or 2, and the corresponding display displays "S-1" or "S-2".

b. Press "𠂇" or "𠂇" to automatically adjust the table to the previously saved position.


### Adjusting Collision Sensitivity

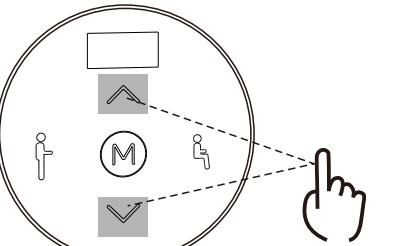

a. The lifting table has the resistance rollback function. When the function is enabled, when the lifting table encounters resistance, the function is triggered, and the lifting table will stop and retreat for a certain distance.

b. Hold down the "▲" key and "▼" key for 3 seconds to enable or disable the resistance rollback function."R-1" indicating that the collision prevention function is turned on; "R-0" indicating that the collision prevention function is turned off;

### Error Code Processing

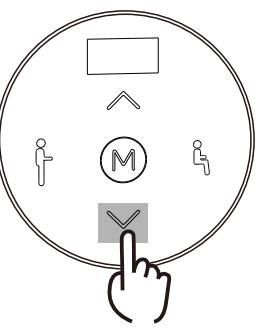

a. Reset function definition: The LED display shows "R51" or "R52". The user holds down the down arrow key until the desk lowers to the lowest position and then rebounds up to a stop. The display will show the lowest height. After releasing the "▼" down key, the reset is complete and the desk can be used normally again.

b. If the display shows "E01" or "E02", please allow the table to rest for at least 18 minutes before using it again.

c. If you encounter any other error codes and the "▼" button does not respond, please check if the connection cable is undamaged and properly connected. Disconnect the power for at least 10 seconds, then reconnect it. The LED screen will display "R51" or "R52". Press and hold the "▼" button to reset.


d. If the desk still does not function properly after performing the above steps, please contact customer service for assistance.

## Troubleshooting

This list is used for checking and solving faults and errors. Please contact the manufacturer if problem you encounter is not on the list below.

Problem	Solution
The electronic functions are unable to operate properly	Check the cable connection
Speed of lifting is slow	
The worksurface slides downward	Check if the load weighs more than 20 kg
The device often enters the reset state	
Only descending, not ascending, or only ascending, not descending	Perform a reset operation
Insufficient height for ascending and descending	
The bottom cannot rise	
After exceeding the working duty cycle requirements (Duty cycle: Max 2min on/18min OFF)	Power off for 18 minutes and then reconnect the power
The power module cannot be used	Reset or perform the ascending and descending operation first, then wait for 1 second before using
When pressing the down key, the device goes up instead	Check if there are any obstacles or hanging cables under the table


### Precaution

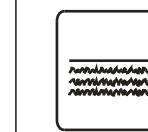


Please place it on a flat surface while using it.




Danger! Do not play with frequent lifting and lowering.

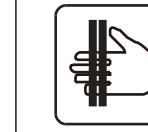

Warning! Watch out for pinch hazards.

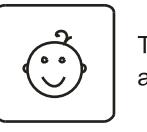

The product is suitable for ages 7 and above.

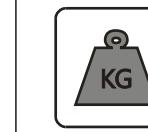

Do not sit or put pressure on the table. Please do not place heavy objects on it.



Attention! Adults only should install, keep children away.



### Attention

1. Power supply :AC100V-120V;
2. Use environment: recommended indoor 5 ~ 40°C;
3. Before cleaning, you must unplug the power plug, wipe the surface dust with a slightly damp cloth when cleaning, be careful not to let water droplets flow into the parts, do not damage the connection line, do not touch the connection of the plug. Periodically check whether the screws are loose and tightened.
4. The electrical box contains electronic components, metals, plastics, wires, etc., which should be treated in accordance with the environmental regulations used in various countries, and should not be disposed of according to conventional household waste.
5. Before using the product, please check carefully to ensure that the product has been correctly installed. Please follow the instructions when installing the product, and leave enough safety gaps when installing and placing the product.
6. Before using the product for the first time, please be familiar with all the functions and program Settings of the product.
7. Children need to use this product with a guardian. Children play on the product, some behaviors are difficult to predict, and the manufacturer does not assume responsibility for the dangerous consequences caused by this.
8. The manufacturer does not bear legal responsibility for the danger caused by the failure to use in accordance with the specifications of this manual or the quality problems of the product itself.
9. Minor noise caused by the structure of the multi-wedge belt or brake system will not have any impact on the use of the equipment.
10. Do not use corrosive or abrasive materials to clean the equipment. It must be ensured that the cleaning agent used will not pollute the environment.
11. Use under proper supervision and guidance for children 14 years old or younger and those with physical and sensory impairments or mental disabilities. Children should not be exposed to play.
12. Minors are not allowed to clean and maintain products without supervision.
13. If the power cord is damaged, it must be replaced by the manufacturer or relevant professionals.
14. Ensure that your operating environment is free from other hazards.
15. When moving, ensure that nothing is placed on the table, the door is closed, the screws are fastened, and the power plug is removed.
16. If repeated handling is required, please keep the original packaging of the product and keep it properly for repeated transportation.
17. Do not use sharp instruments to strike glass.
18. Note: The total power of electrical appliances used in the cabin should not exceed 1000W!
19. The rated power of the entire cabin is 75W.



Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Euroseats B.V.  
Deventerweg 7  
3771 NP  
Barneveld  
Netherlands