



Installation instructions

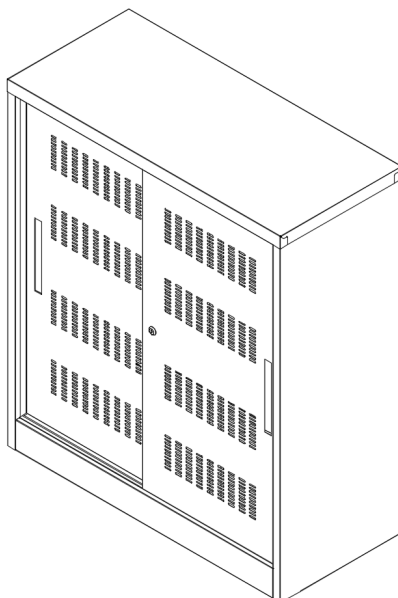


🕒 15MIN

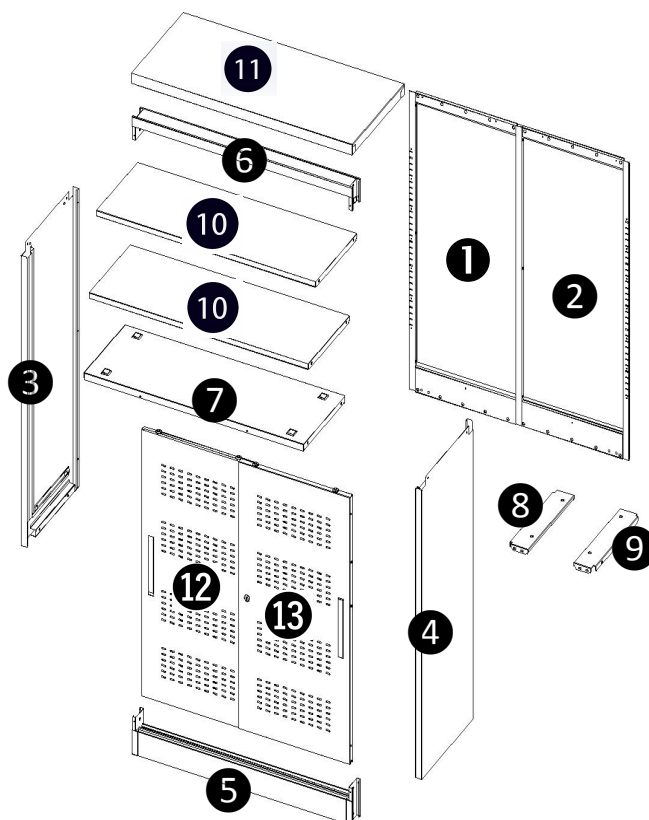


A  X21 M5X12mm	B  X12 M5X12mm	C  X8	D  X4	E  X4	F  M5	G 
---	---	--	---	---	---	---

step 1

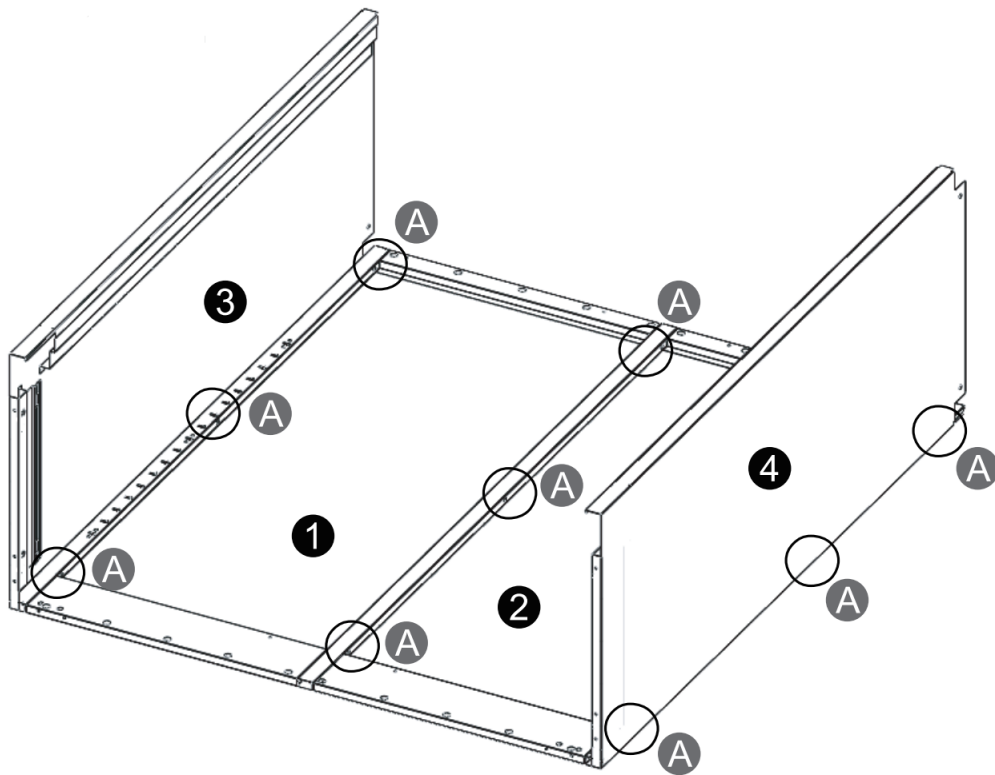


A
X9
M5X12mm

step 2

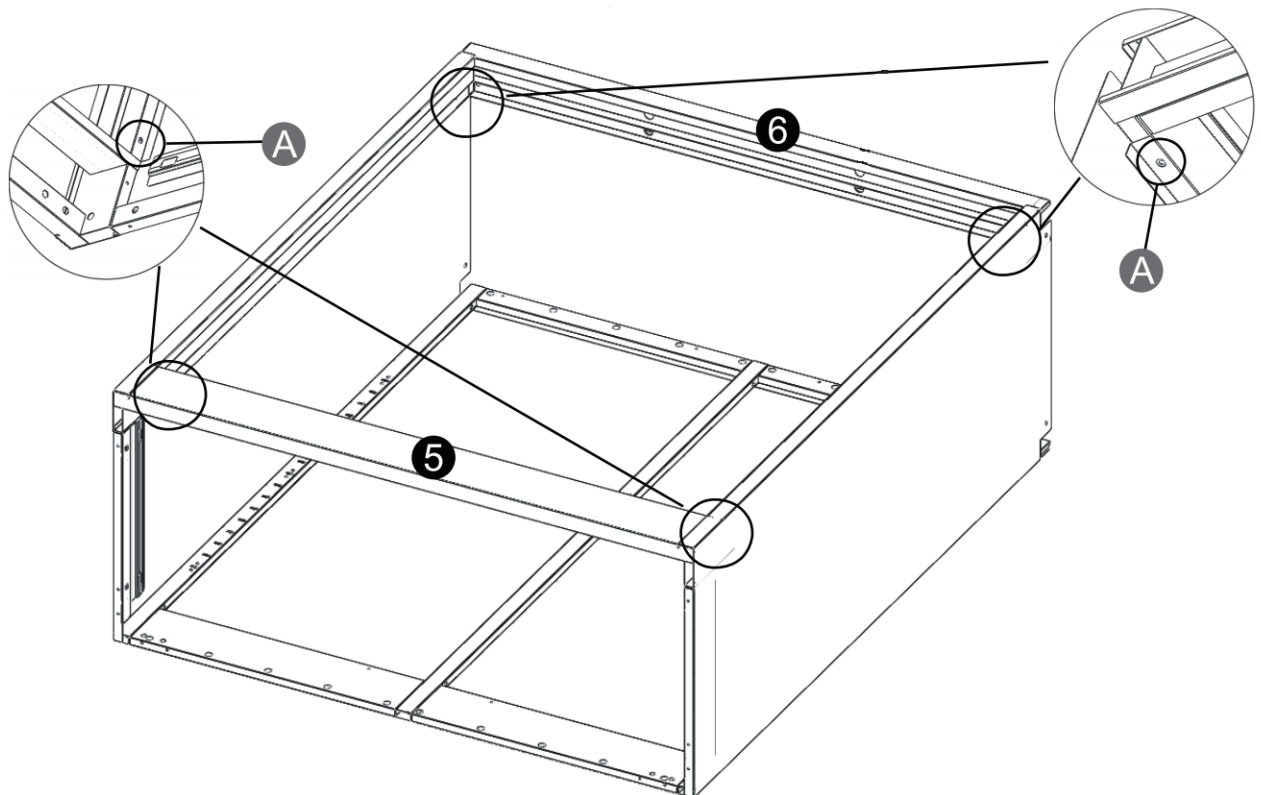



A
X4
M5X12mm

step 3

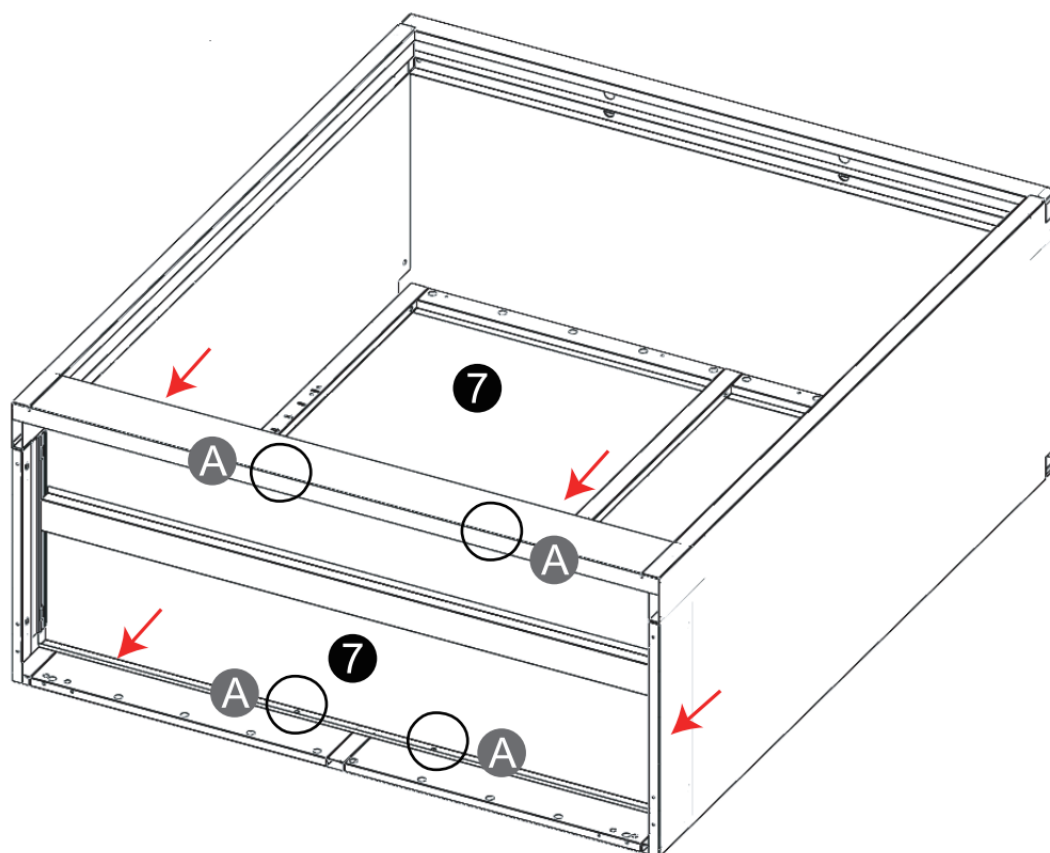


A  X4
M5X12mm

step 4

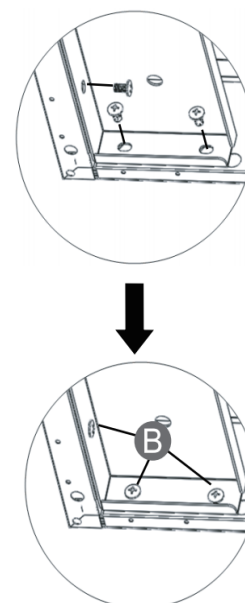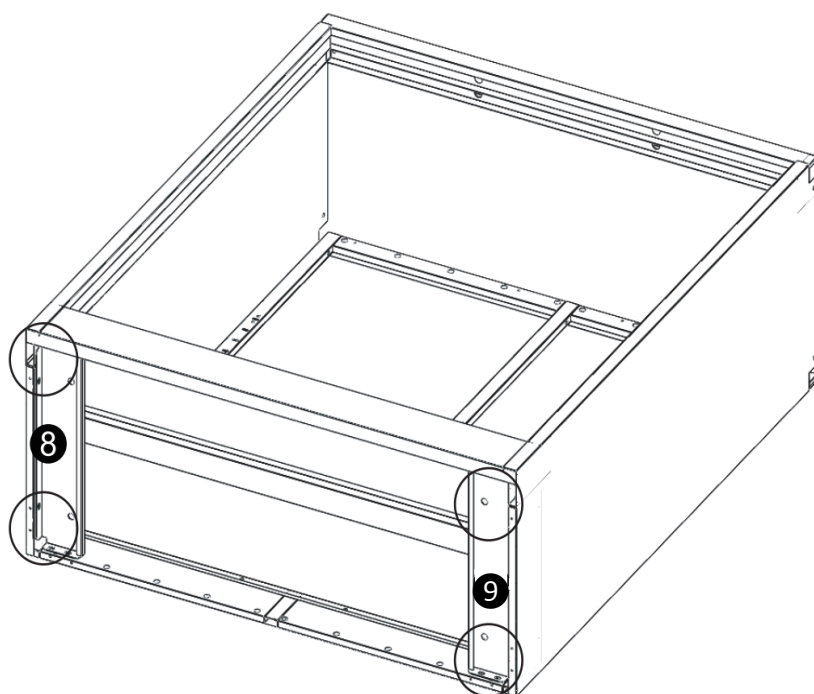

B  X12
M5X12mm

step 5

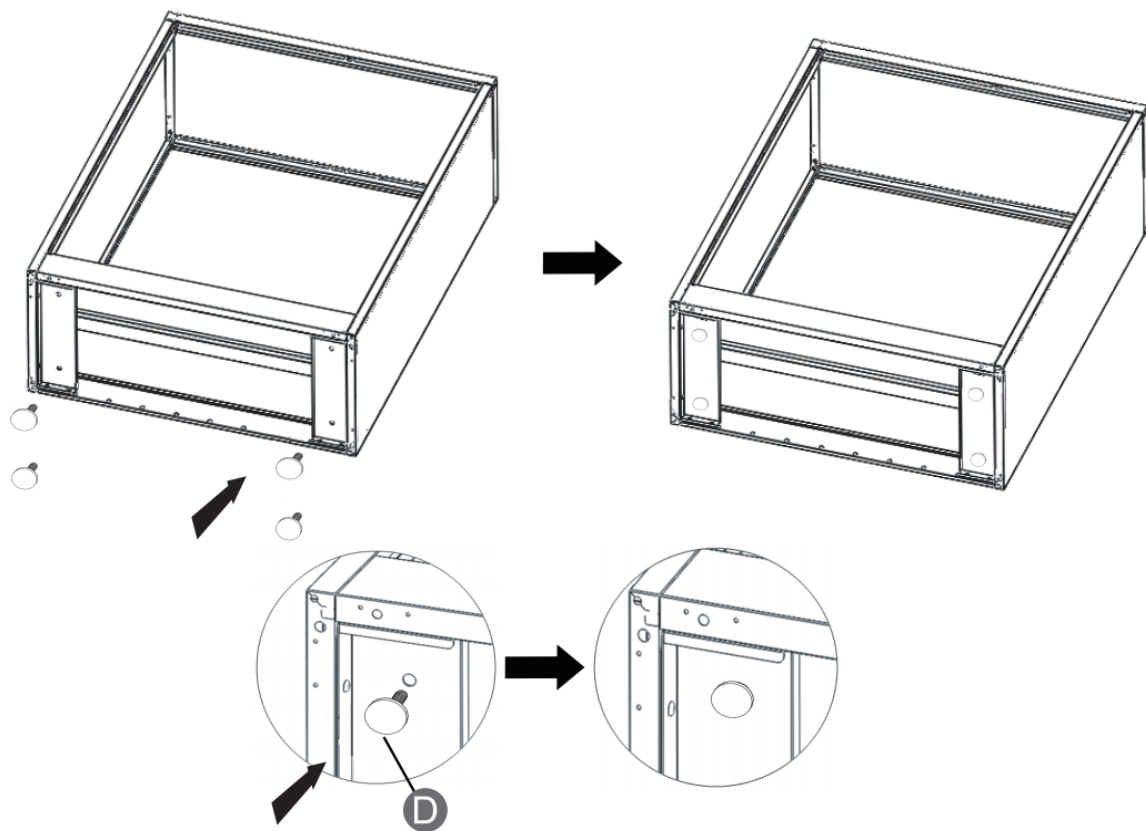


D



X4

step 6

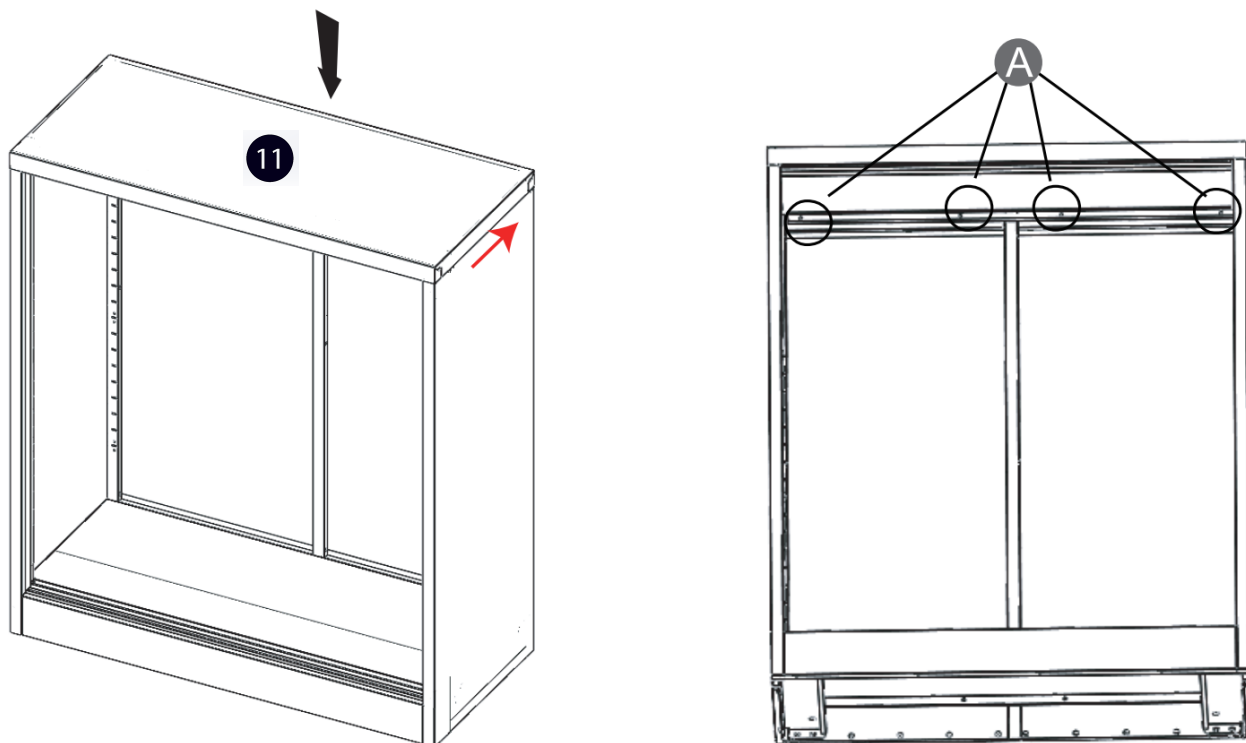


A



X4


M5X12mm

step 7

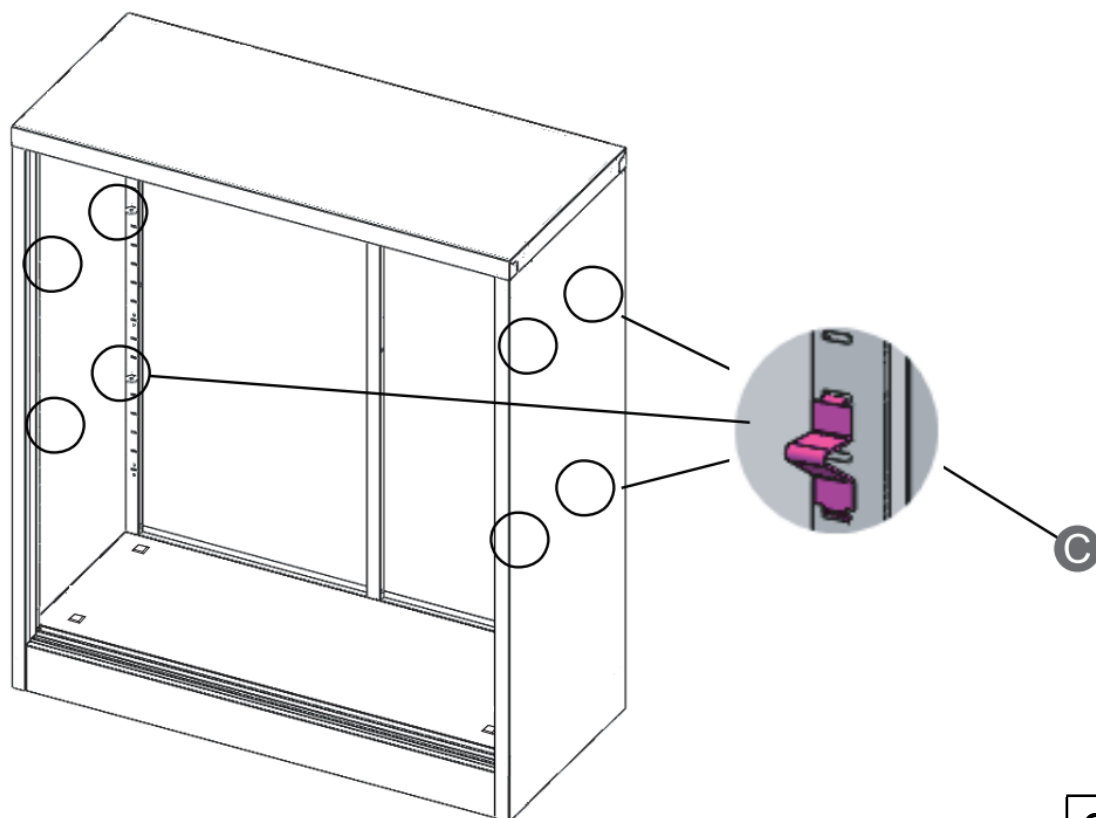


X8

step 8

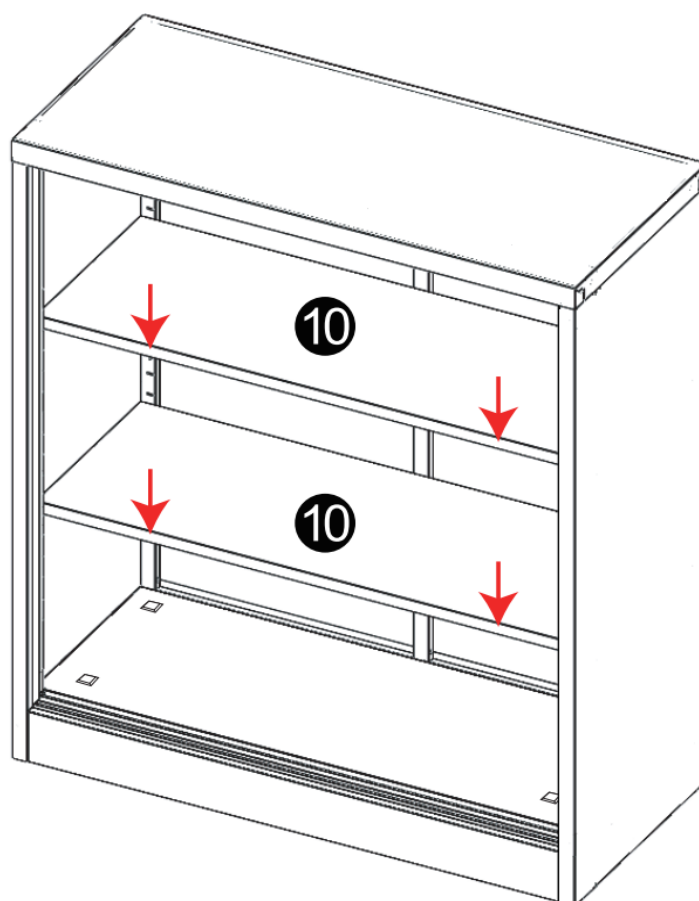

step 9

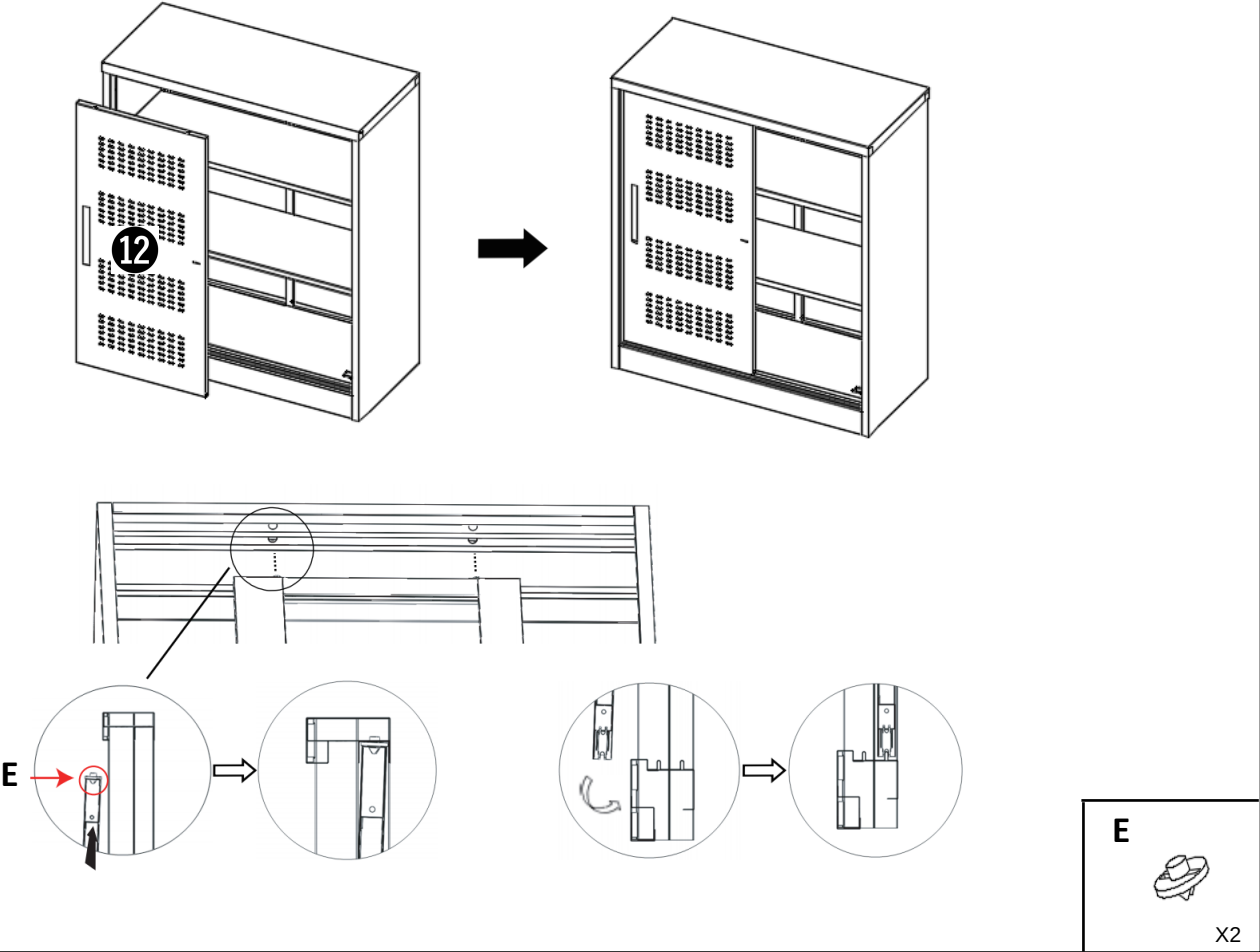

step 10

